

This product should only be fitted by a qualified plumber to NVQ (National Vocational Qualification) or SNVQ (Scottish National Vocational Qualification) Level 3. Should the installation be completed by a non-qualified person then the guarantee may be considered invalid.

For a claim made under our warranty written certification of your installers credentials can be required. For further information or to find a qualified installer in your area please visit the Institute of Plumbers website - www.iphe.org.uk

THE QUALIFICATIONS

At present, to be a plumber you need to follow the National Vocational Qualification (NVQ) route (Scottish National Vocational Qualification - SNVQ - in Scotland). These qualifications are made up of theory and practical work in the classroom/purpose built training facility and work based experience with a working plumber. Colleges should help students find a work placement, although many students organise it themselves.

The S/NVQ qualification works in levels. All recently qualified plumbers should hold S/NVQ Level 2 as basic with Level 3 as the preferred level. Level 2 will give you the foundation you need for a career in plumbing and teach you domestic plumbing to a satisfactory level. Level 3 is more comprehensive and deals with domestic, commercial and industrial plumbing along with aspects such as gas - if you want to one day set up your own business, this is the level to reach. The Institute of Plumbing and Heating Engineering, and the industry as a whole recommends that all plumbers reach a minimum of Level 3.

Reaching Level 3 has other advantages. The Institute runs a Master Plumber Certificate, which only those attaining Level 3 or equivalent can reach as long as they have the relevant experience as well. Those with S/NVQ Level 3 can (once in membership with the Institute for five years as a Member MIPHE) gain Engineering Technician EngTech status with the Engineering Council (UK).


For any further information please contact
Crosswater on: **0845 873 8840**

Or visit our web-site at www.crosswater.co.uk

The manufacturer reserves the right to make technical
modifications without prior notice.

Kia Thermostatic Shower Valve Exposed

EV1253EC

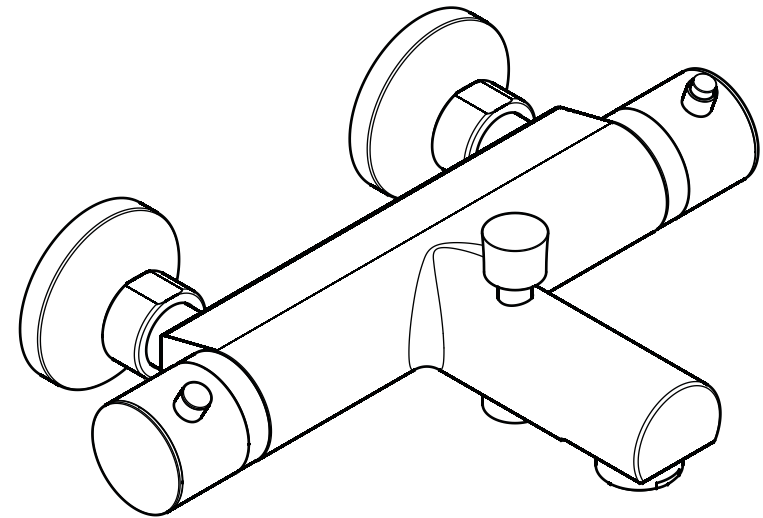

INSTALLATION INSTRUCTIONS

INTRODUCTION

Please read these instructions carefully and keep in a safe place for future reference.

General Installation Requirements

The installation must comply with regulations of the Local Water Authority as contained in their bylaws. All of the taps in this range are single flow (the hot and cold water mix in the body) and should therefore be supplied with hot and cold water at balanced pressures, both from the tank or both from the mains (via a combination boiler for example). If the taps are not supplied at balanced pressures then the mixer will not function correctly. The mixer is provided with non-return valves on both hot and cold feeds. It is very important that all pipe work is flushed thoroughly after installation to avoid damaging the ceramic discs.

Standard Specifications

1. Recommended working pressure:..... 0.2 - 5 bar
2. Maximum test pressure:10 bar
3. Maximum hot water temperature : 80 °C
4. Recommended temperature: 50-60 °C
5. Pressure difference between hot and cold water: max. 1,0 bar
6. We recommend to install filters in the water system and if necessary in the product.
7. Warning :
 - if the above mentioned conditions (see points 1,4,5 and 6) are not observed, the product may not correctly work or not work at all.
 - if during installation, before setting the product on the sanitary fittings, faults due to the special finishing are evident you may require the replacement of the tap.

Approvals

All two hole taps are manufactured complying with requirements of European Standard UNI EN 1111 : 2000.


Preparation and bylaw requirements

These taps are single flow so the hot and cold water mix in the body. Water bylaws require that where the hot water is supplied from a tank and cold from the mains, non return valves are fitted on both hot and cold pipes as close as possible to the tap.

Where combination boilers are fitted it is only necessary to shut off the incoming mains and turn the boiler off and non return valves are not required.

WARNING

- **Installation Performed By Qualified Personnel Only!**
- **Clean Carefully The Water Pipes Before Installing The Tap.**

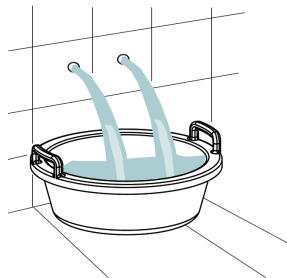

CALIBRATION

The mixer has been adjusted to a safe showering temperature under ideal conditions at the factory, appropriate for most systems.

Proceed to the 38 setting by turning the spindle under the following conditions:

- Hot water temperature at least 55 °C
- Cold water temperature from 10 °C to 25 °C

⚠ Make sure that the hot water temperature is at least 55°C and that there is sufficient supply.

Caution! Before testing the mixer, make sure that the hot and cold water is flowing correctly by exercising the temperature selector knob between the cold and hot stops.

Turn the temperature handle(9) to 38° position and test that the temperature of the water from the shower outlet is hot enough. If hot temperature is not the desired, depress the override button and rotate slowly the handle to position 45°. If desired hot temperature still can not be reached, follow next steps.

Position temperature handle to 38° position.

Remove the covering plate(1) of temperature handle(9) with carefull and use a suitable screwdriver to uncrew the screw handle(10).

Remove temperature handle without change position of stop assembly.

 
Insert temperature handle so that 35° is in line with the stop assembly.

Rotate temperature handle to 38° and wait for the water to stabilise. If desired hot temperature is not achieved, repeat procedure.

Do not exceed maximum safe temperature at position 45°.


Once finished, put the handle in place and proceed in the opposite way to assemble.

DIMENSIONS

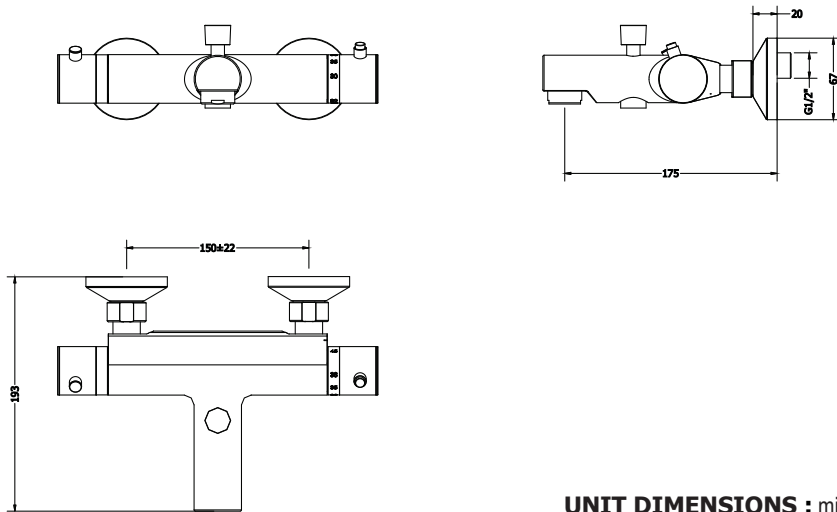

UNIT DIMENSIONS : millimeters

INSTALLATION

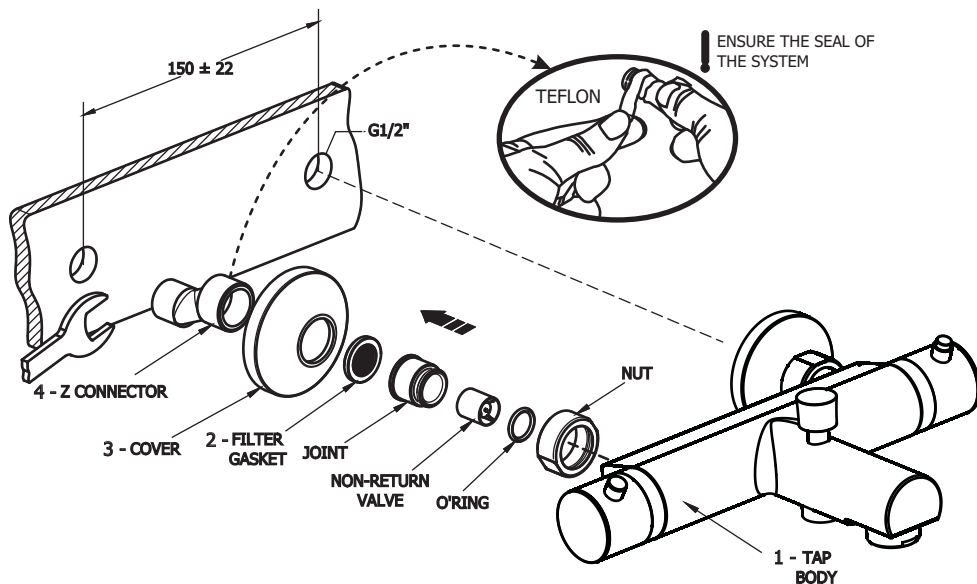

INSTALLATION

First shut off your water heating system then. With your mains stop cock closed, open the lowest hot and cold taps in the house and allow to run until the cold storage tank and pipes are empty (the hot water storage cylinder always remains full). Fitting isolating valves to the inlet feeds is recommended for ease of maintenance.

INSTALLATION

Remember to turn off the mains water supply before connecting to any existing pipe work.

 
Screw the Z-connector (4) to the pipe installation (hot and cold water entrances) checking the hermetic holding.

Pre-screw the cover (3) on the Z-connectors (4). Connect the mixer (1), inserting the filter (2) in the nuts and screw them on the Z-connectors, checking the hermetic seal. After having connected the bath mixer body to the system, open the stopcocks and verify the correct functioning of the mixer moving the handle in all the possible directions. Check the connection seal.



ATTENTION

Having first checked all new connections, turn on the mains stop cock, close all taps except the new mixer and as the system starts to refill check for leaks. Once you have satisfied yourself that there are no leaks, switch on the water heating.

FUNCTION

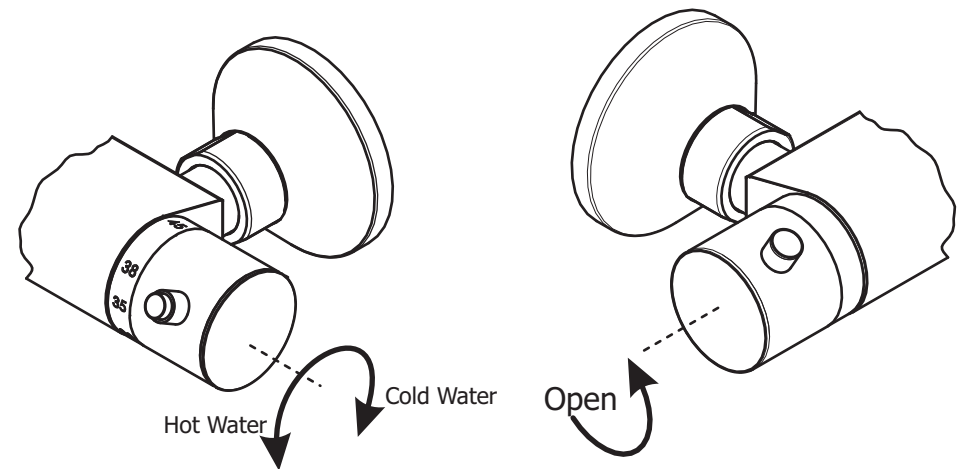

MAINTENANCE

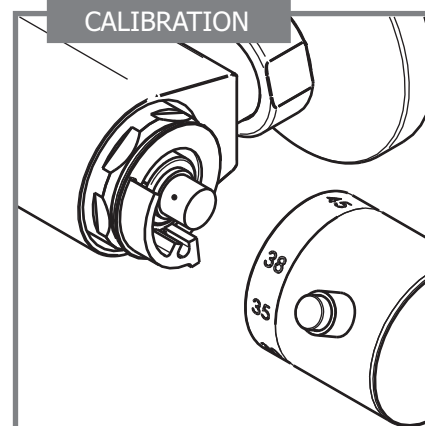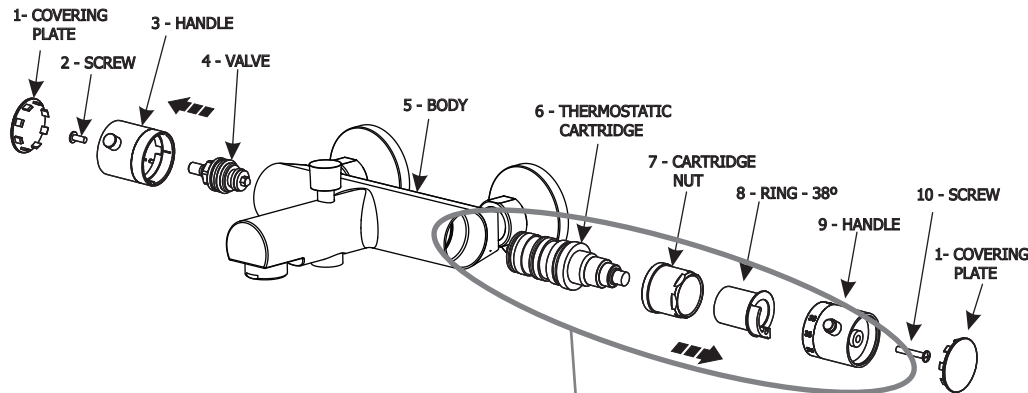 **CLEANING THE THERMOSTATIC CARTRIDGE**

The concealed cartridge should give trouble free service, but in the event of any problems, servicing is straight forward.

To remove the thermostatic cartridge.

⚠ **First shut off the water supply to the tap.**

Close the hot and cold water entrances.

Remove the handle covering plate (1) using a thin blade paying attention not to damage the surface of the tap.

Unscrew the screw (2), extract the handle (3) and the ring nut (4).

Unscrew the hexagon screw (6) using a 3mm allen wrench and extract the thermostatic cartridge (5).

Once finished, put the cartridge back and proceed in the opposite way to assemble.

Before fixing the handle, repeat set up following the instructions in the "CALIBRATION" section in the preceding page.

CLEANING THE VALVE CONNECTION

The concealed valve connection should give trouble free service, but in the event of any problems, servicing is straight forward.

To remove the valve connection.

⚠ **First shut off the water supply to the tap.**

Close the hot and cold water entrances.

Remove the handle covering plate (1) using a thin blade paying attention not to damage the surface of the tap.

Unscrew the screw (2), extract the handle (3), the stop ring (10) and the broached ring (9).

Unscrew the valve (8) using a 17mm allen wrench.

Once finished, screw in the valve (8) and proceed in the opposite way to assemble.

CLEANING

The chrome plate we use on our taps is very durable, nevertheless care should be taken when cleaning them. They should be cleaned only with warm soapy water followed by rinsing with clean water and drying with a soft cloth. All finishes are vulnerable to acid attack and some strong substances such as household cleaners, disinfectants, denture cleaners, hair dyes, wine making and photographic chemicals can cause the surface to go black or peel.