

NL

MONTAGEVOORSCHRIFT

D

MONTAGE-ANLEITUNG

E




MOUNTING INSTRUCTIONS

F


INSTRUCTIONS DE MONTAGE

Vrijstaande opstelling
Raumteiler
Positionnement libre
Free-standing installation

L	600	800
R	560	760

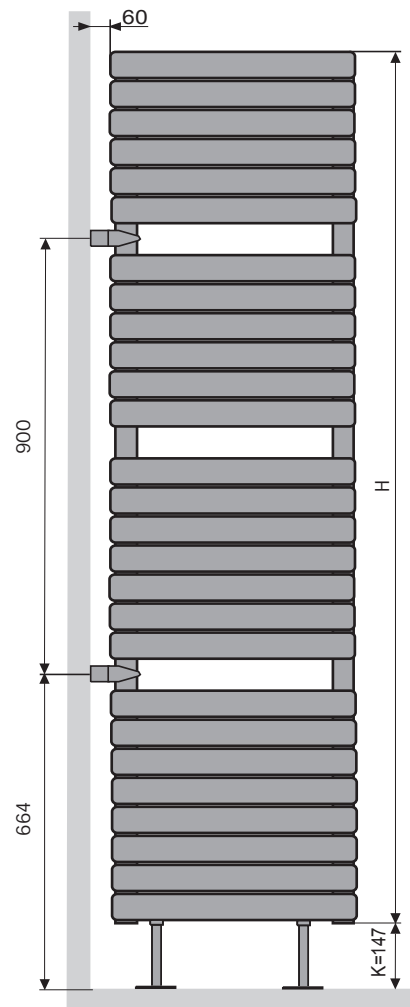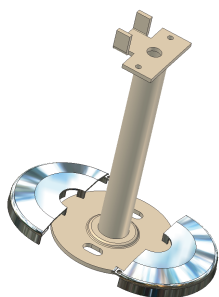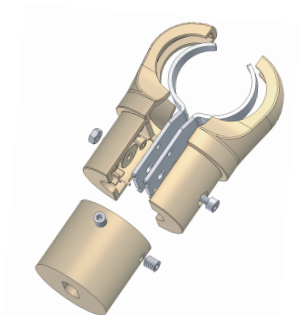


HF2 Vrijstaand / HZ2 Vrijstaand

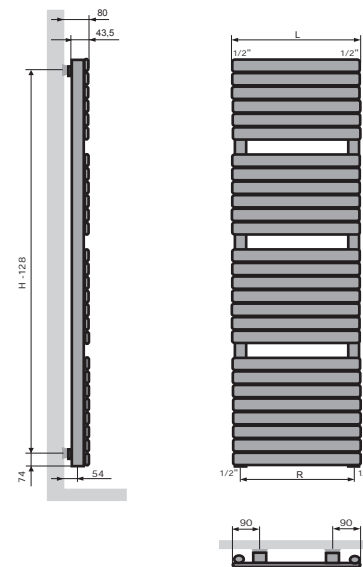

Werkdruk : Max.10 bar
Betriebsdruck : Max.10 bar
Pression de service : Max.10 bar
Operating pressure : Max.10 bar

L	450	600	700	800
R	410	560	660	760

HF / HZ

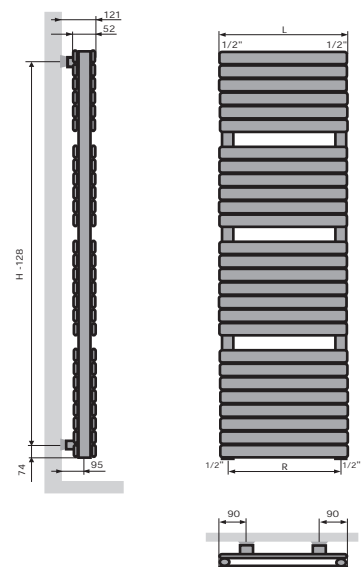

L	600	800
R	560	760

HF2 / HZ2