

 
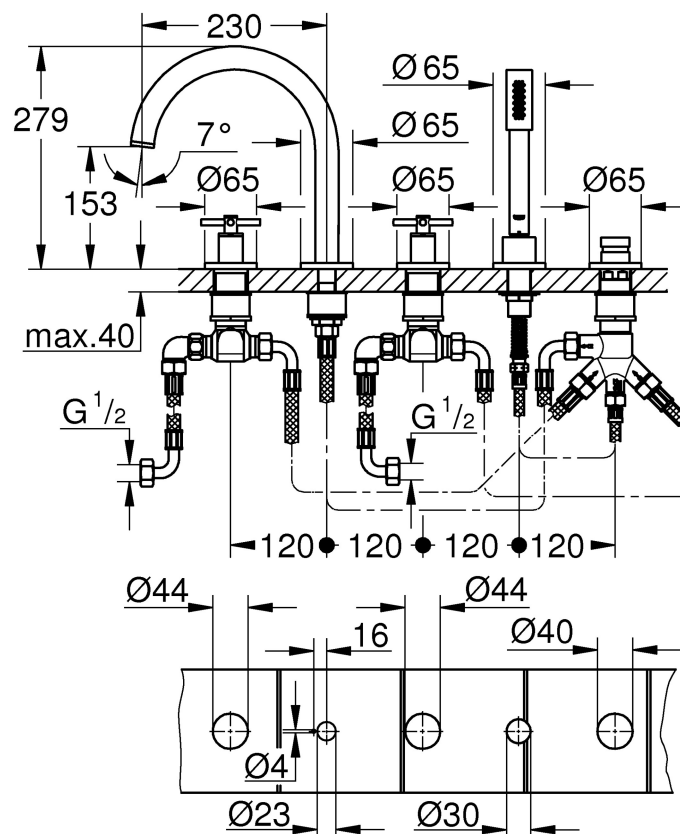
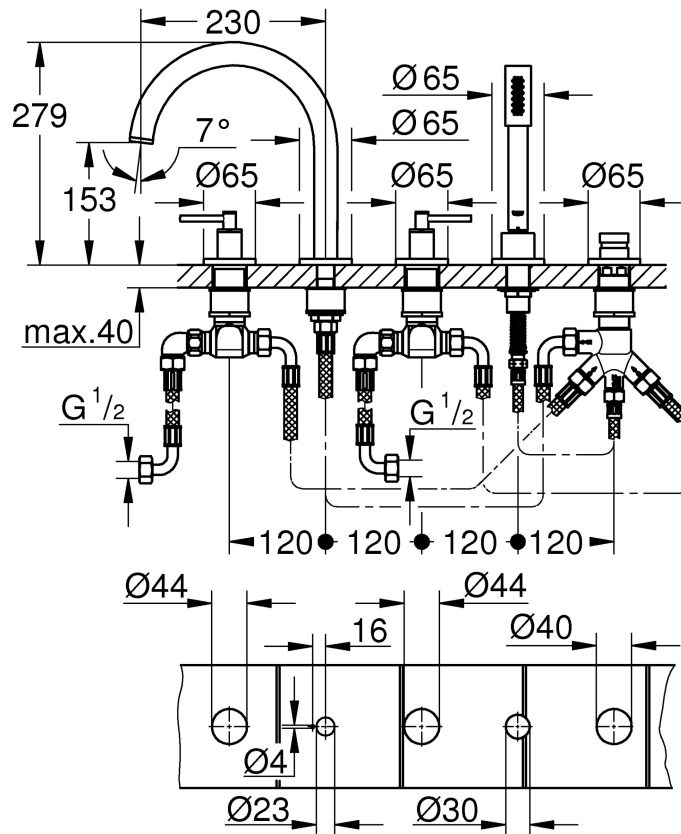

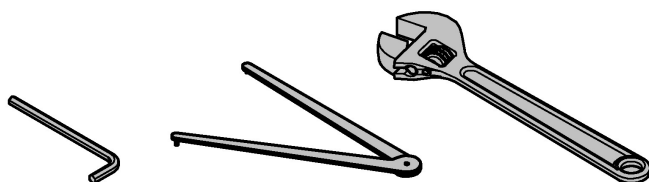
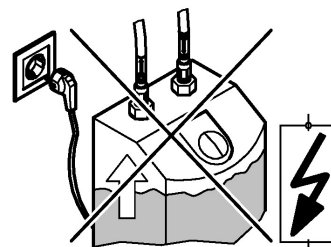


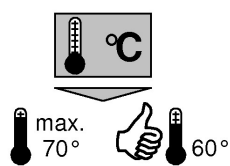


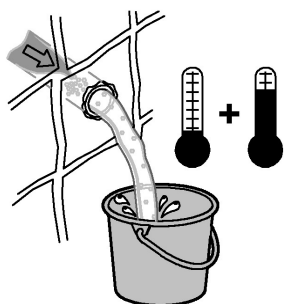

1


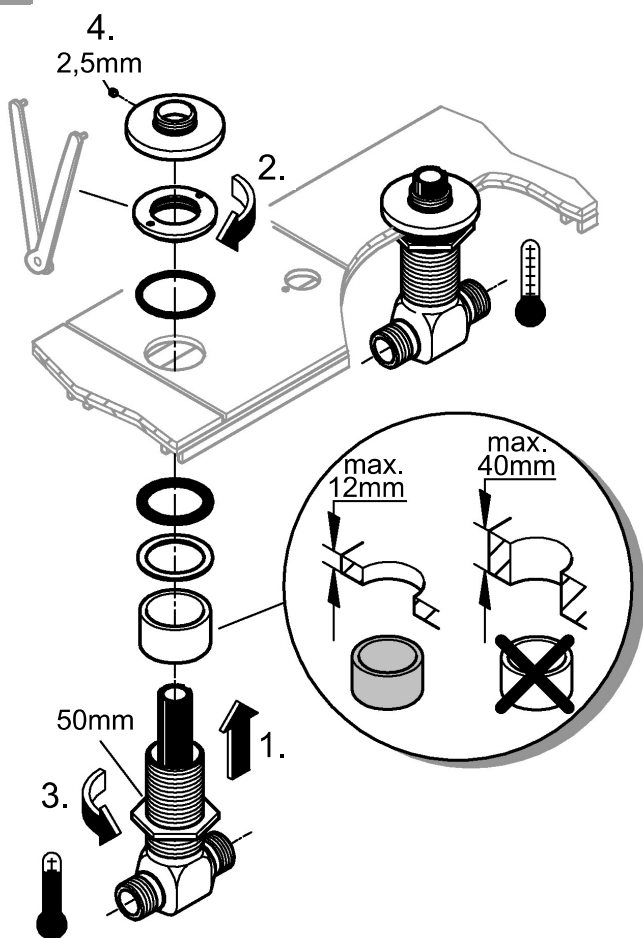



2

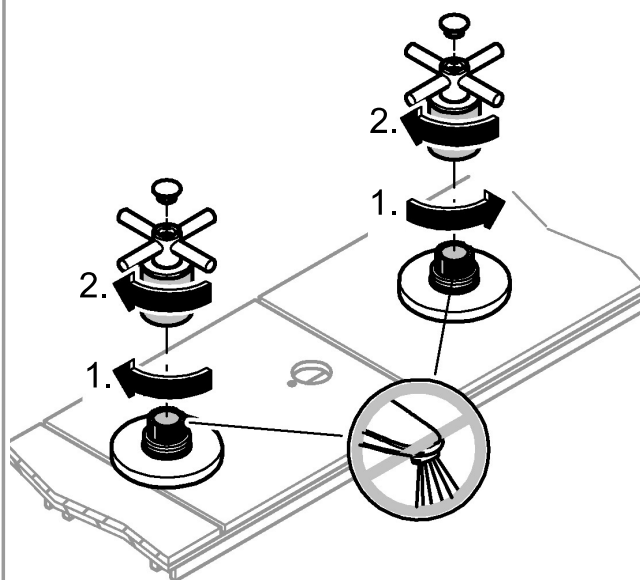



3

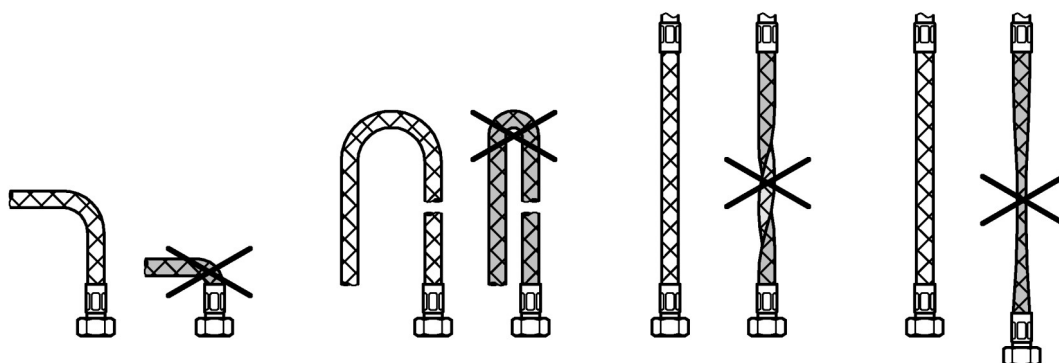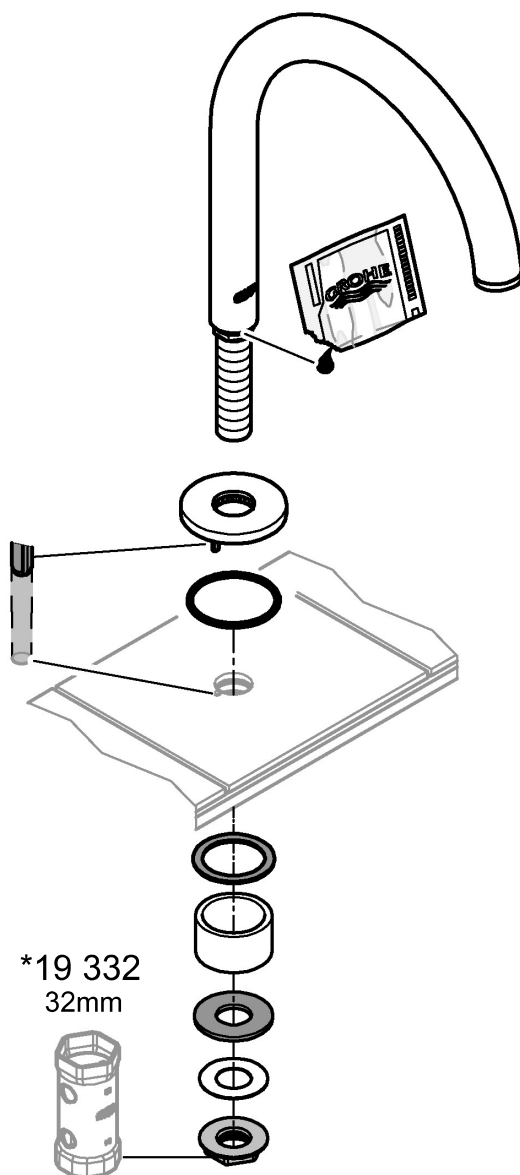

 

4

32mm

5.

7mm

4.

36mm

2.

1.

50mm

3.

This diagram illustrates the assembly of a 32mm lens. It shows five numbered steps: 1. Inserting a small pin into the base of the lens. 2. Attaching a 36mm ring to the base. 3. Attaching a 50mm ring to the base. 4. Attaching a 7mm ring to the base. 5. Attaching a 32mm ring to the base. A detailed view of the base shows a small pin being inserted into a hole.

5

32mm

6

8mm

2.

13mm


1.

7

This exploded view diagram illustrates the components of a water tap assembly. At the top, a square plate with a central mounting hole is shown. Below it, the main tap body is depicted with a central G^{3/4} inlet and two side outlets. The left side outlet is labeled G^{3/4} and is connected to a curved pipe. The right side outlet is labeled 29mm and is connected to a straight pipe. The central outlet is labeled 24mm and is connected to a straight pipe. The diagram also shows various internal components, including a handle, a valve, and a cartridge, which are shown in their relative positions to the main assembly. The handle is shown in two positions: one for 'ON' (indicated by a '+' sign) and one for 'OFF' (indicated by a '-' sign). The valve is shown in two positions: one for 'ON' (indicated by a '+' sign) and one for 'OFF' (indicated by a '-' sign). The cartridge is shown in two positions: one for 'ON' (indicated by a '+' sign) and one for 'OFF' (indicated by a '-' sign).




8

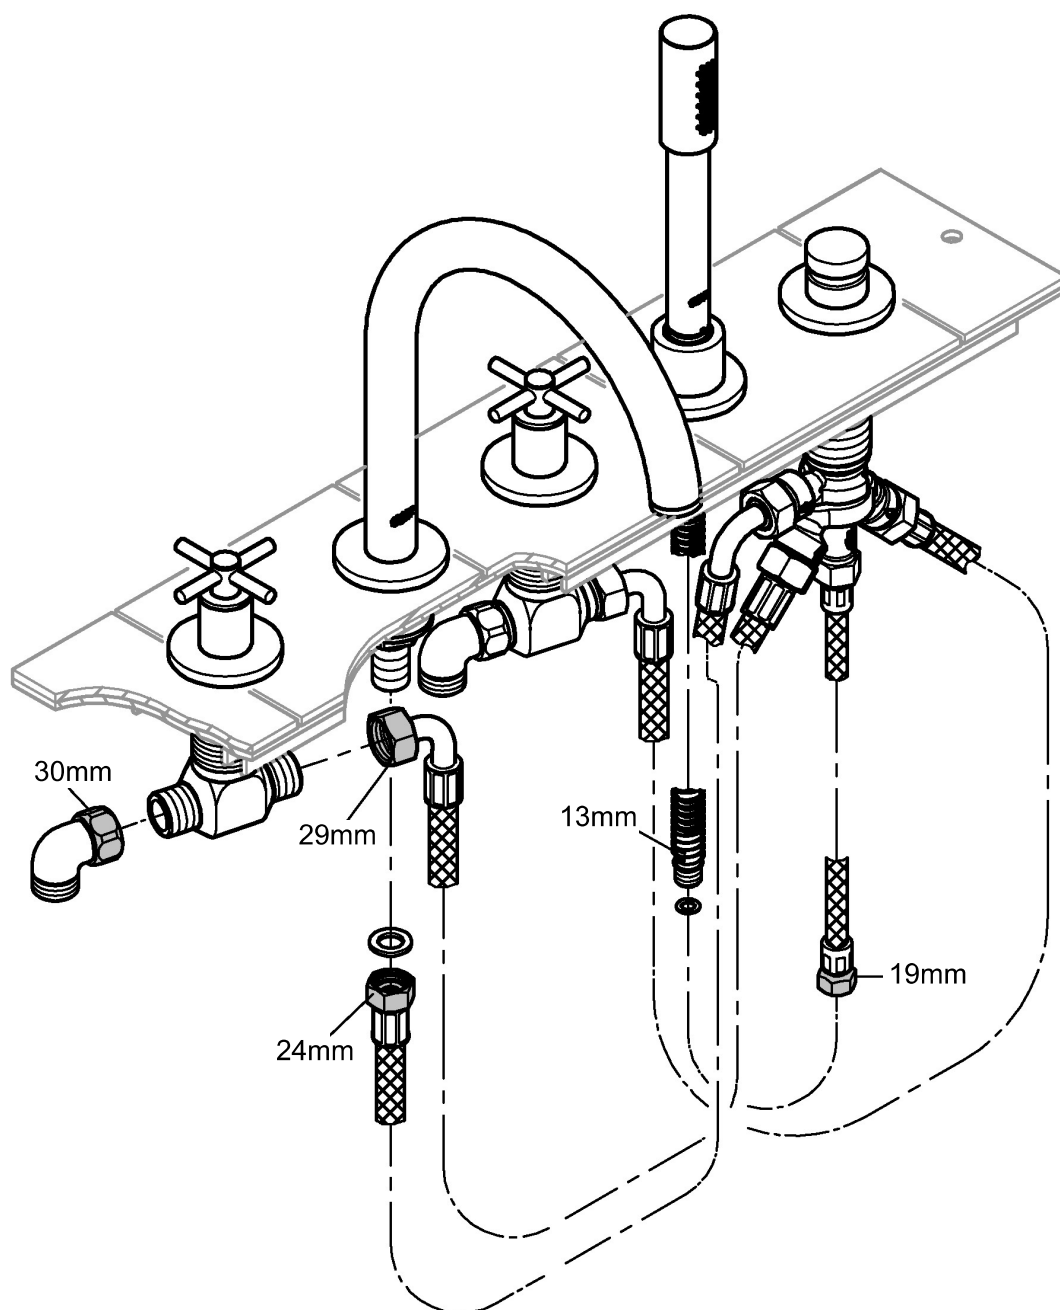















9a



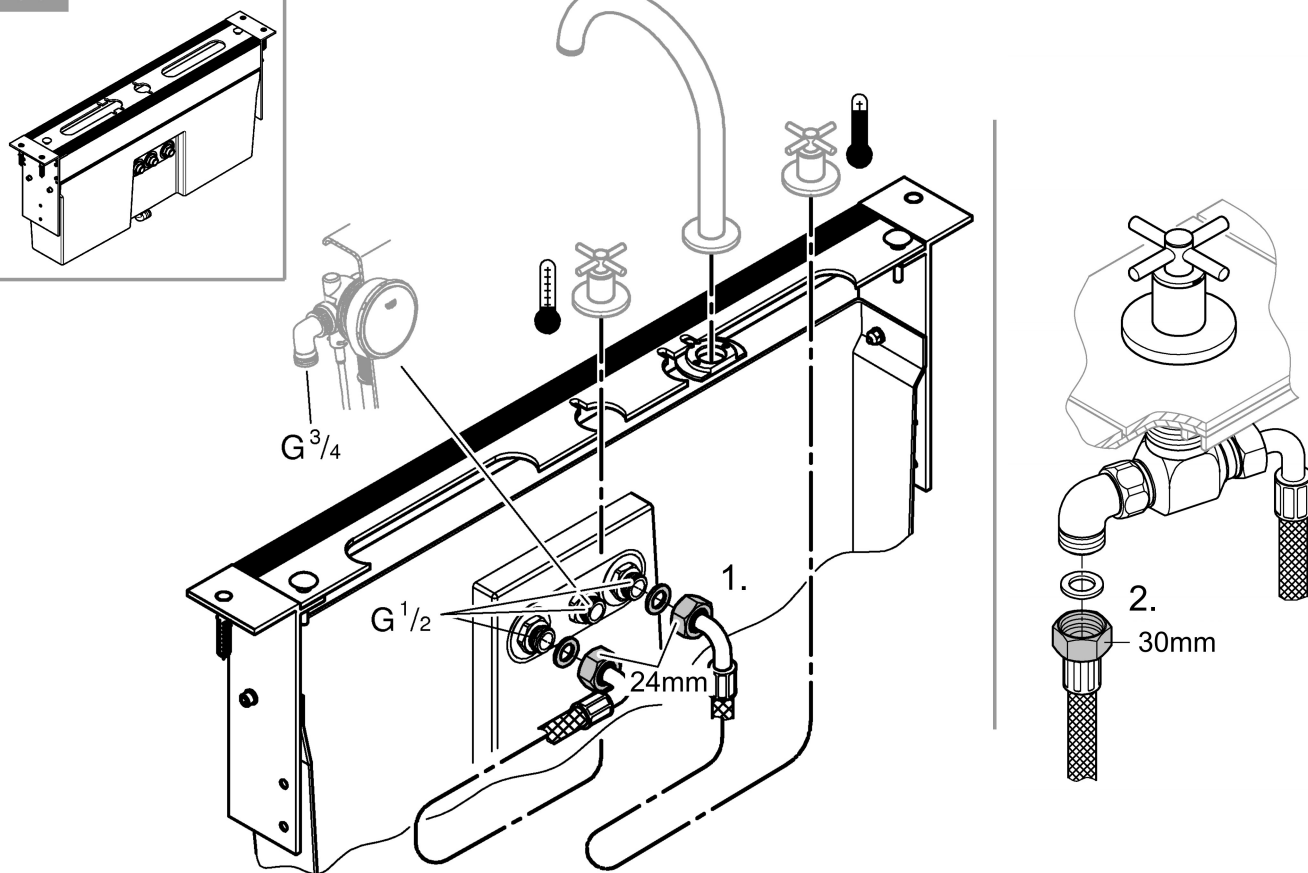


9b

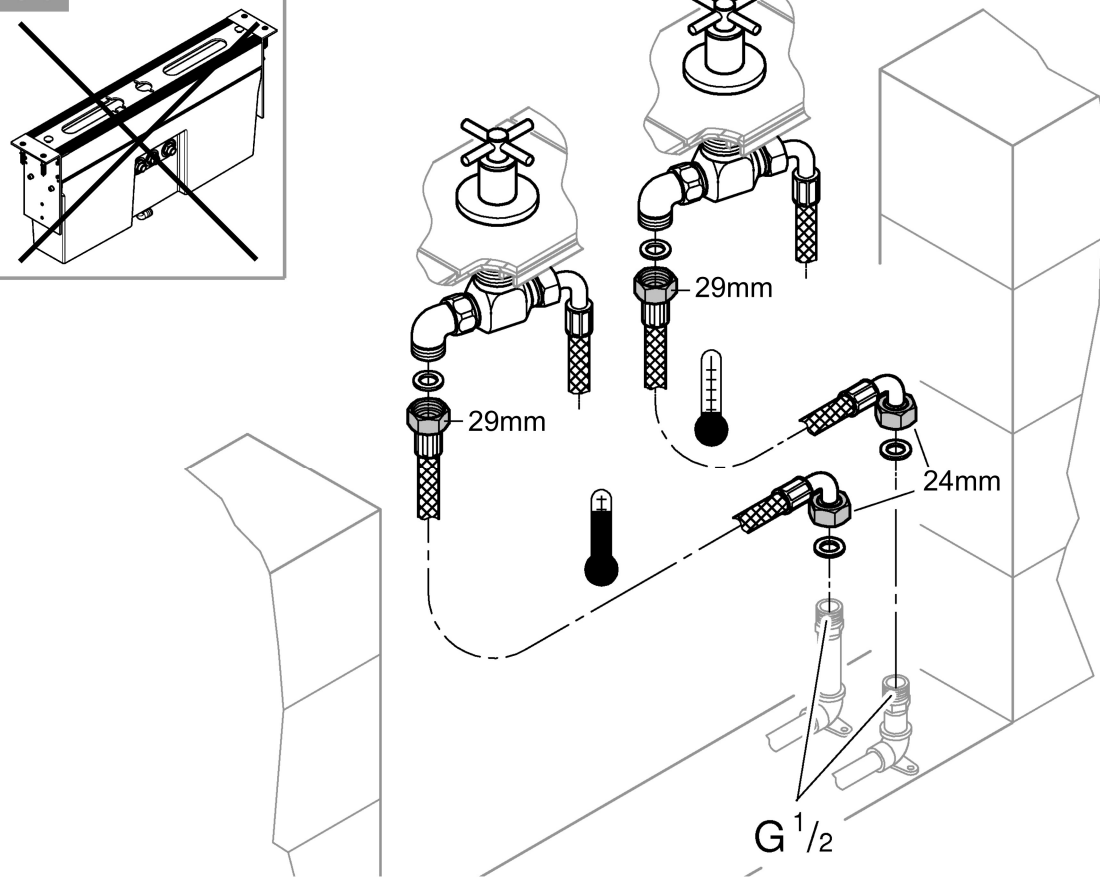

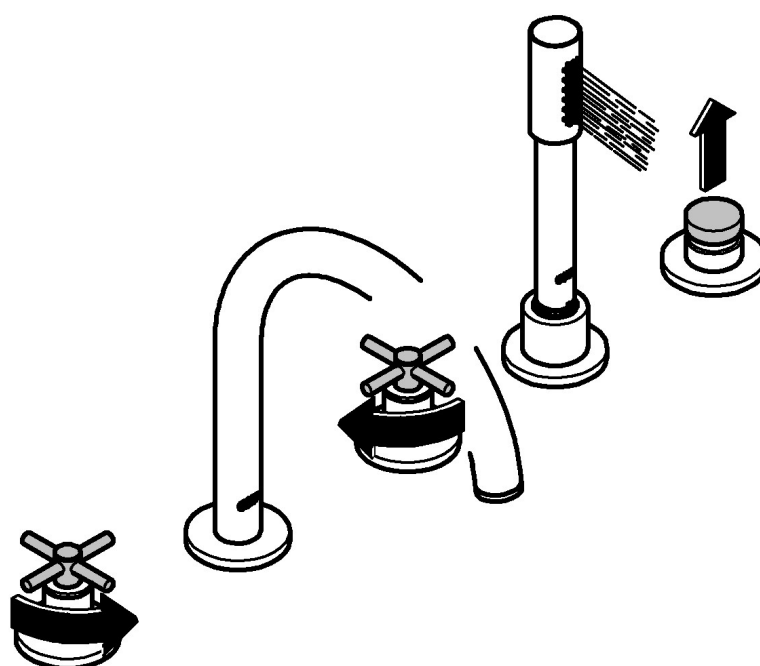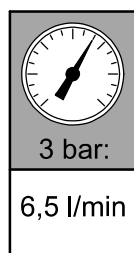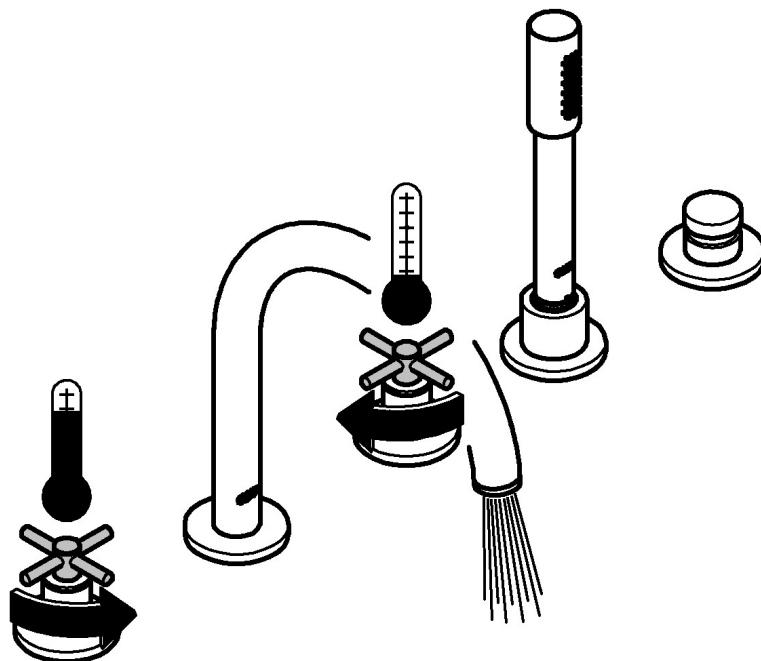 

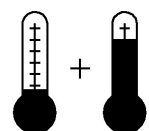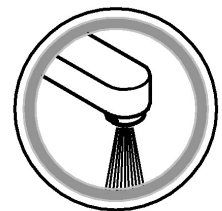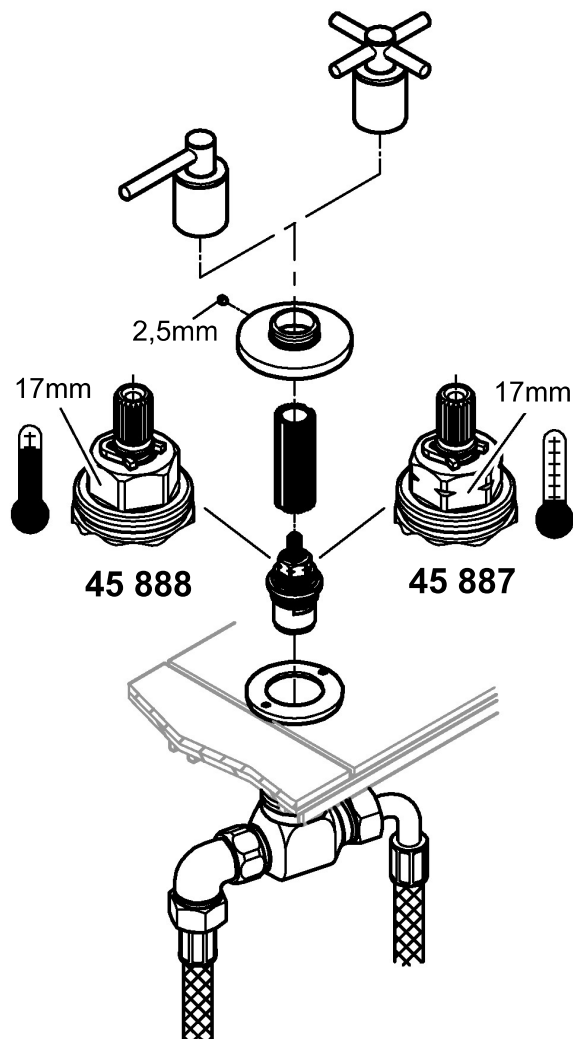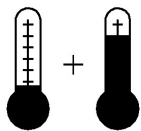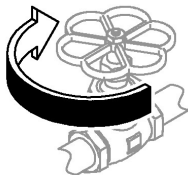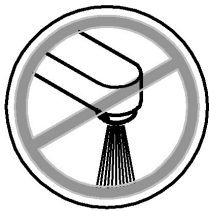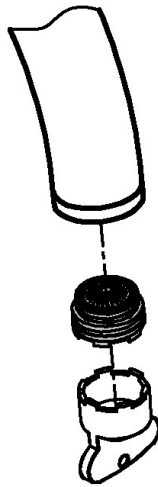

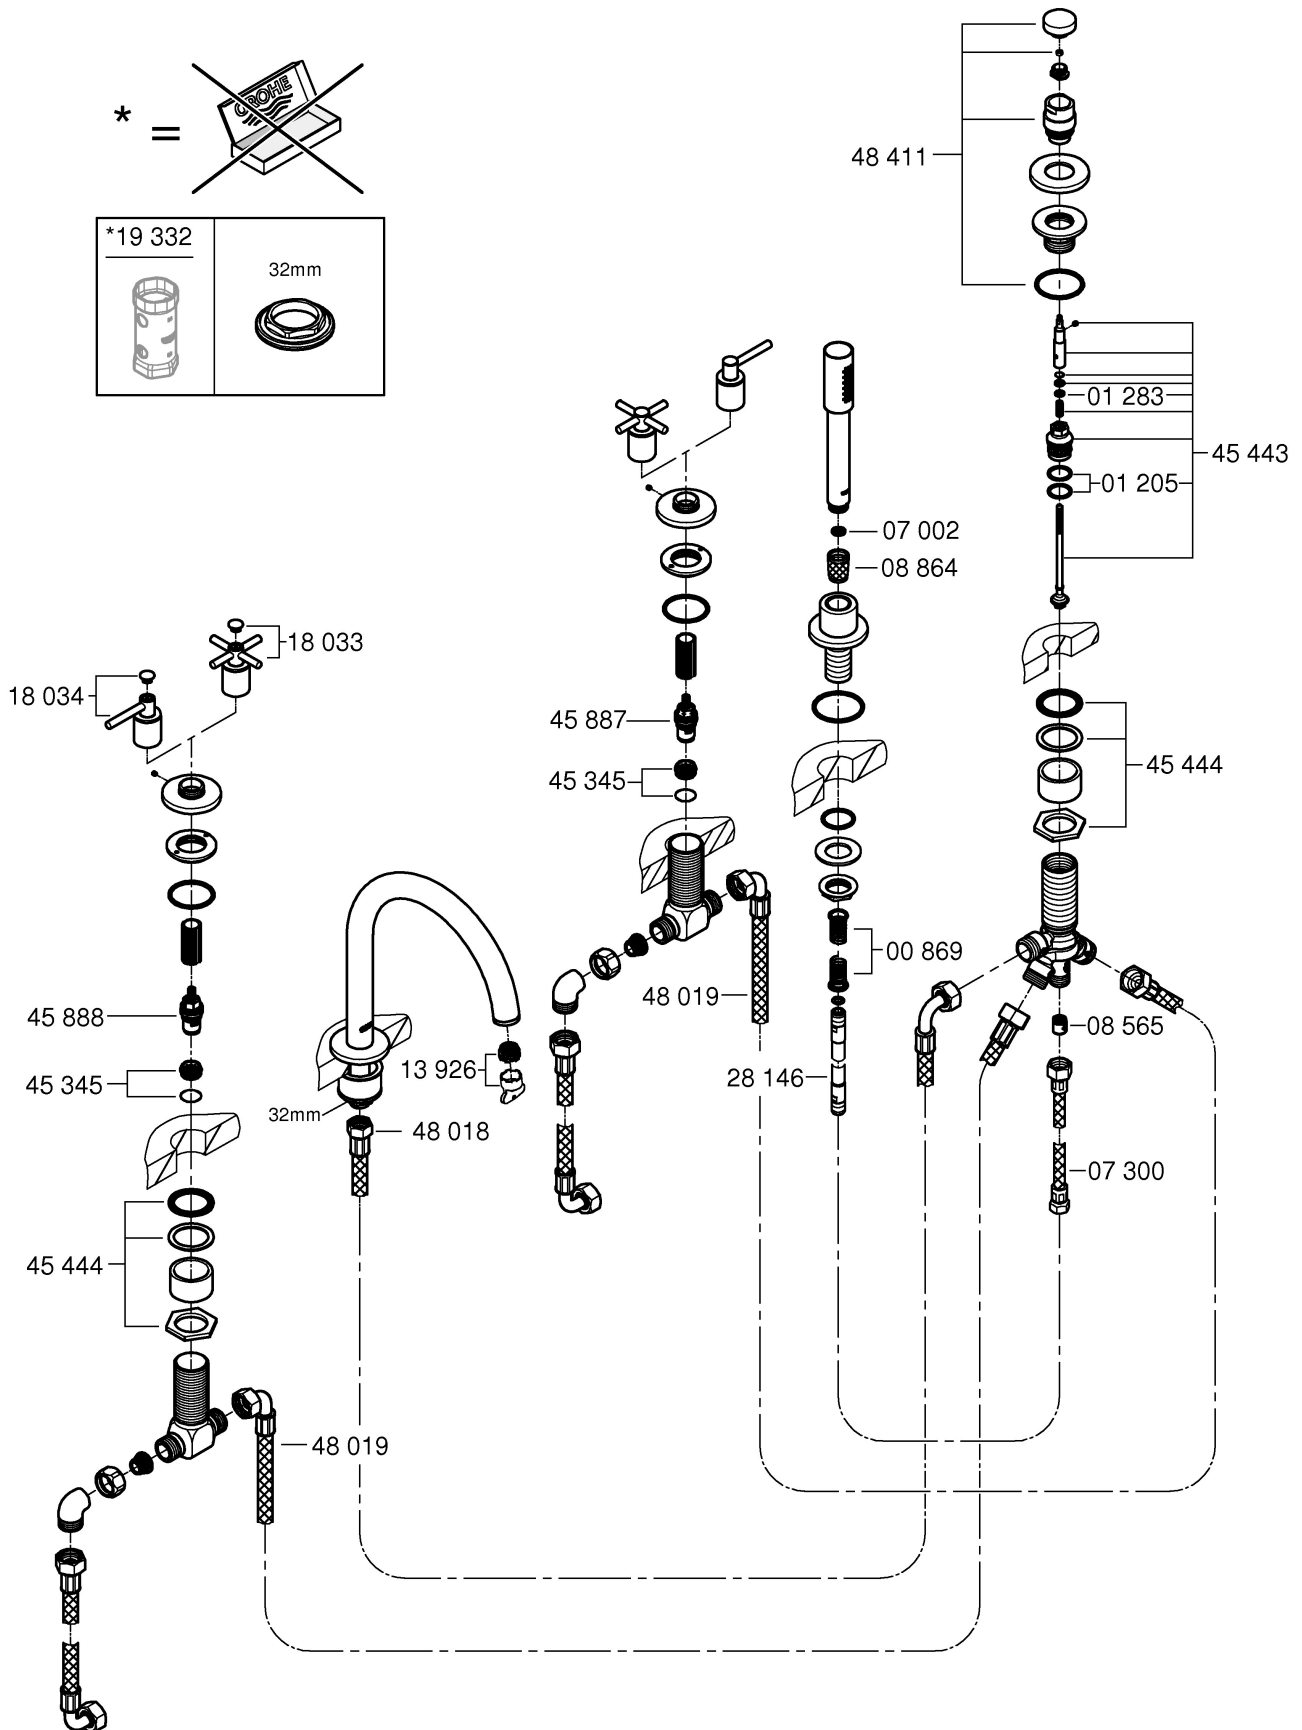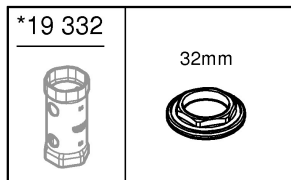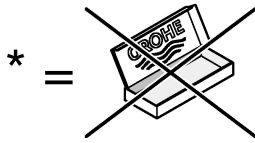

Pure Freude an Wasser

GROHE

D

☎ +49 571 3989 333
helpline@grohe.de

A

☎ +43 1 68060
info-at@grohe.com

AUS

☎ +(61) 1300 54945
grohe_australia@lixil.com

B

☎ +32 16 230660
info.be@grohe.com

BG

☎ +359 2 9719959
grohe-bulgaria@grohe.com

BR

☎ 0800 770 1222
falecom@grohe.com

CAU

☎ +99 412 497 09 74
info-az@grohe.com

CDN

☎ +1 888 6447643
info@grohe.ca

CH

☎ +41 44 877 73 00
info@grohe.ch

CN

☎ +86 4008811698
info.cn@grohe.com

CY

☎ +357 22 465200
info@grome.com

CZ

☎ +358 942 451 390
grohe-cz@grohe.com

DK

☎ +45 44 656800
grohe@grohe.fi

E

☎ +34 93 3368850
grohe@grohe.es

EST

☎ +372 6616354
grohe@grohe.ee

F

☎ +33 1 49972900
sav-fr@grohe.com

FIN

☎ +358 942 451 390
grohe@grohe.fi

GB

☎ +44 871 200 3414
info-uk@grohe.com

GR

☎ +30 210 2712908
nsapountzis@ath.forthnet.gr

H

☎ +36 1 2388045
info-hu@grohe.com

HK

☎ +852 2969 7067
info@grohe.hk

I

☎ +39 2 959401
info-it@grohe.com

IND

☎ +91 1800 102 4475
customercare.in@grohe.com

IS

☎ +354 515 4000
jonst@byko.is

J

☎ +81 3 32989730
info@grohe.co.jp

KZ

☎ +7 727 311 07 39
info-cac@grohe.com

LT

☎ +372 6616354
grohe@grohe.ee

LV

☎ +372 6616354
grohe@grohe.ee

MAL

info-malaysia@grohe.com

MX

☎ 01800 8391200
pregunta@grohe.com

N

☎ +47 22 072070
grohe@grohe.no

NL

☎ +31 79 3680133
vragen-nl@grohe.com

NZ

technicalenquiries@paterson
trading.co.nz

P

☎ +351 234 529620
commercial-pt@grohe.com

PL

☎ +48 22 5432640
biuro@grohe.com.pl

RI

☎ 0-800-1-046743
customercare-
indonesia@asia.lixil.com

RO

☎ +40 21 2125050
info-ro@grohe.com

ROK

☎ +82 2 1588 5903
info-singapore@grohe.com

RP

☎ +63 2 8938681

RUS

☎ +7 495 9819510
info@grohe.ru

S

☎ +46 771 141314
grohe@grohe.se

SGP

☎ +65 6311 3611
info-singapore@grohe.com

SK

☎ +420 277 004 190
grohe-cz@grohe.com

T

☎ +66 21681368
(Haco Group)
info@haco.co.th

TR

☎ +90 216 441 23 70
GroheTurkey@grome.com

UA

☎ +38 44 5375273
info-ua@grohe.com

USA

☎ +1 800 4447643
us-customerservice@grohe.com

VN

☎ +84 90 9694768
☎ +84 90 9375068
info-vietnam@grohe.com

AL **BiH** **HR** **KS**

ME **MK** **SLO** **SRB**

☎ +385 1 2911470
adria-hr@grohe.com

**Eastern Mediterranean,
Middle East - Africa
Area Sales Office:**
☎ +357 22 465200
info@grome.com

IR **OM** **UAE** **YEM**

☎ +971 4 3318070
grohedubai@grome.com

Far East Area Sales Office:
☎ +65 6311 3600
info@grohe.com.sg

Latin America:
☎ +52 818 3050626
pregunta@grohe.com