

Mono Basin Mixer

Installation & Aftercare

Specification

Operating Specification

Hot water supply - Max 65°C
Recommended 60-65°C

Operating Pressures

Min 0.5 bar - Max 7.0 bar


Fitting Installation

1. Screw Fixing Stud (6) to the Tap Body (1).
2. Fit Flange (2) with Anti_Rotational Washer (3) to the Tap Body (1), ensure that the Anti_Rotational Washer (3) is fitted to the Flange (2).
3. Screw 2x Braided Connectors (8) to Tap Body (1) through the hole of the Flange (2) by hand.

4. Locate the tap assembly down through the hole of the basin.
5. Fit Rubber Washer (4) and Metal Washer (5) onto the threaded of the Fixing Stud (6), then fit Fixing Nut (7) onto Fixing Stud (6).

DO NOT OVER TIGHTEN.

6. Connect Braided Connectors (8) to the hot and cold water supplies using suitable plumbing joints.
7. Turn on the mains water supply and re-fill the system. Check immediately for leaks. It is always advisable at this stage to flush out the system. To do this, open the valve fully and allow water to flow for approximately 1 minute. This will remove any foreign matter within the tap body.
8. Finally turn on all water heating arrangements.

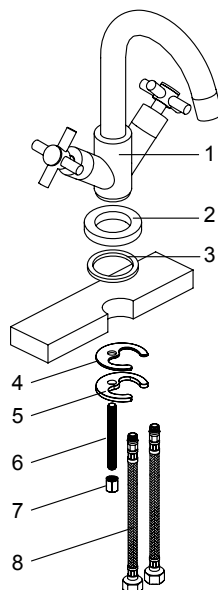

Aftercare

To maintain the appearance of this fitting, ensure it is cleaned using only a clean soft damp cloth. A solution of warm water and mild liquid detergent may be used where necessary and then rinsed thoroughly. Abrasive cleaners or acidic cleaners **MUST NOT BE USED** under any circumstances. Avoid contact with solvents.

Please retain these instructions for future reference.