

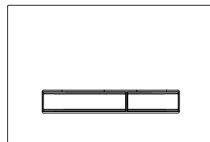
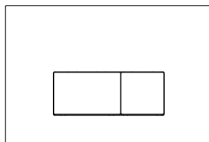
 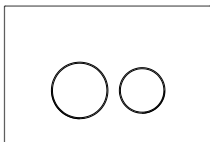


INSTALLATION MANUAL QERAMIQ PUSH STEEL

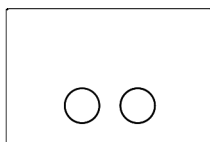

SCOPE OF SUPPLY

① 1x1



 
② 1x1



③ 1x1



④ 1x1









⑤ 2x2



⑥ 2x2(M4X12)




MECHANICAL INSTALLATION

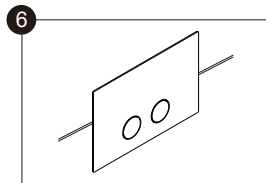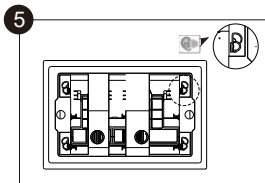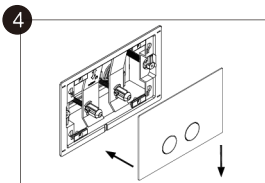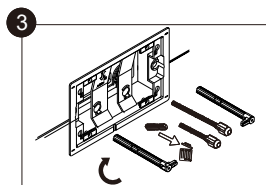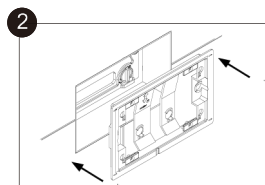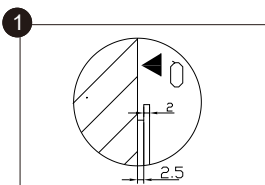

QERAMIQ

MAGNETIC INSTALLATIONS I

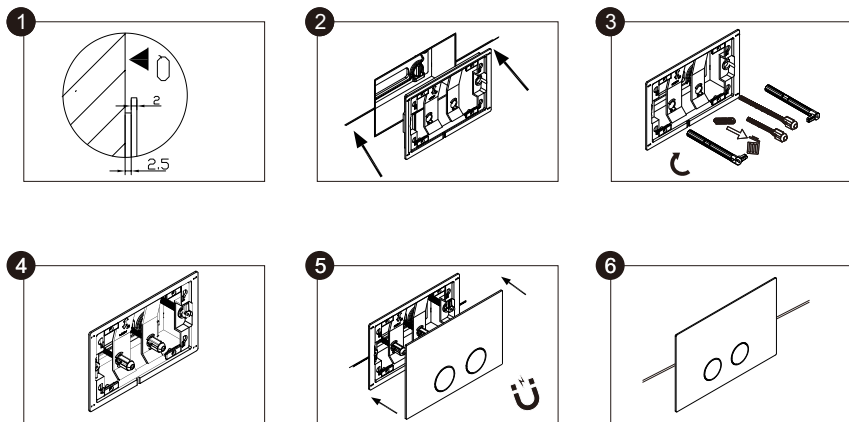

MAGNETIC INSTALLATIONS II

