

7750 N

The upper right corner of the furniture

MANUAL

Spirit level

DO NOT USE:
ABRASIVE CLEANERS, SCOURING PADS, STEEL WOOL etc.
PRODUCTS CONTAINING BLEACH, SODA OR ACID
FURNITURE POLISH
WARNING:

pattern to remove any soiling. Then rub with a damp cloth moistened in clean water to remove the cleaning agent and avoid stains or streaks. Remove stubborn soiling with hot water and a little mild detergent if

Dry the surface with a clean, dry soft cloth.

Clean the bathroom furniture with a soft clean cloth moistened in warm water and a little detergent.

Furniture with textured surfaces are best cleaned in the direction of the

The finished boards and edging used for Crosswater moisture resistant furniture have highly durable qualities and are easy to clean surfaces.

CLEANING AND CARE INSTRUCTIONS FOR FURNITURE

IMPORTANT NOTE
You should carefully read the recommendations for use provided by your cleaning product manufacturers. If in doubt, you can test the cleaning agent and care product in an inconspicuous area.

Avoid hot or sharp objects coming into contact with the furniture.

Tape measure

Masking tape

Scissors

Tools required


Drill

WP5 - R

Clear silicone

Phillips No 2 Screwdriver

Drill bit 8mm

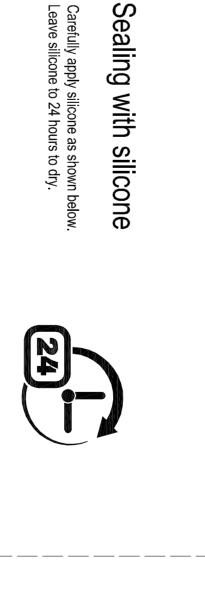

Hanger

2750N

°/ω Ν →

Hanger 7750N

3 2 1 (P (D)

Hight adjustment

Depth adjustment


Lock the cabinet on the wall

ယ

2

Adjust hangers

The mounting kit includes dowels size Ø8x40. Check whether they are suitable for your wall.

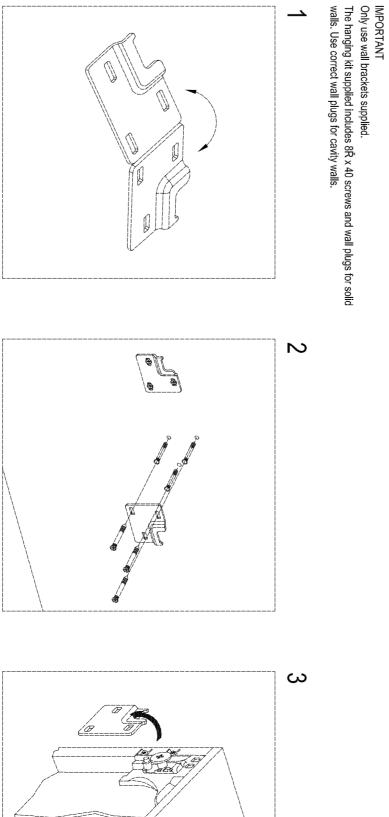

INSTALLTION OF WALL BRACKETS AND HANGERS