

IMPORTANT - Please read before installation

Please read these instructions carefully before starting installation and keep in a safe place for future reference. Check the contents of the pack carefully before installation. Simpsons will not be held responsible for any de-fit / re-fit costs where faulty product has been fitted. If any fault is found with materials or workmanship, it must be reported immediately to the manufacturer. Remedial action will be taken, based on information received, on condition that:


1. Full details are supplied to the manufacturer;
2. The shower seal has not been modified or tampered with;
3. The manufacturer is informed of any damage/shortages prior to installation.

We do not accept responsibility for any problems that may occur through incorrect installation.


CARE AND CLEANING

Do not use abrasive material or chemicals to clean the shower seat.


PACKAGE CONTENTS

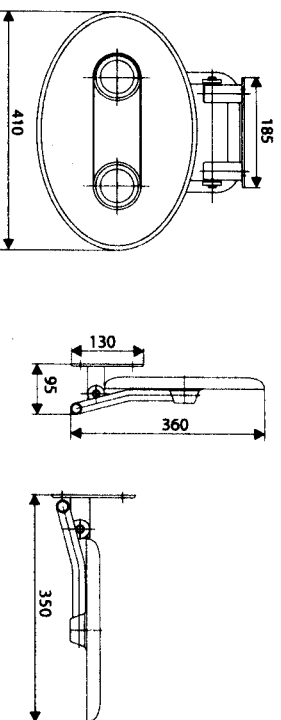

4x		ML Ø6x80 mm
4x		Ø5x90
4x		Ø12 mm

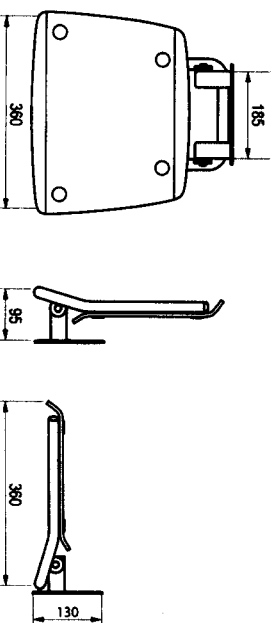


TOOLS AND EQUIPMENT NEEDED

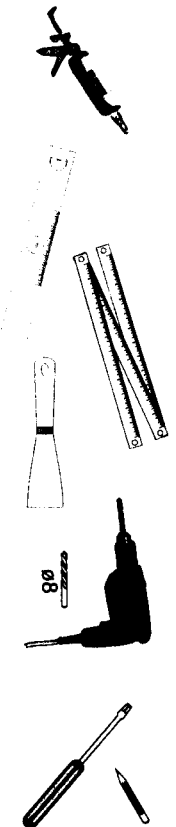


INSTALLATION INSTRUCTIONS


STEP 1

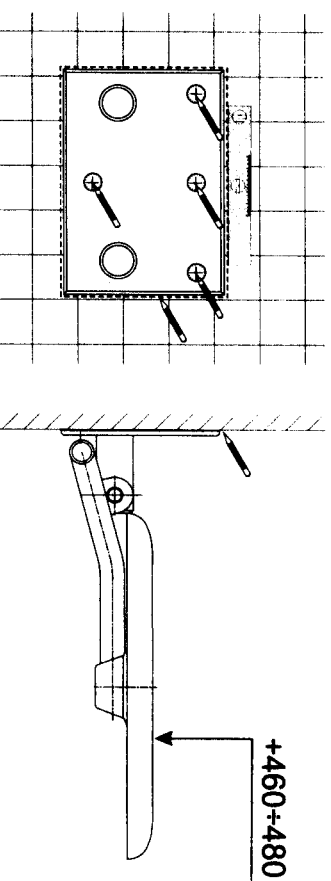

STEP 2

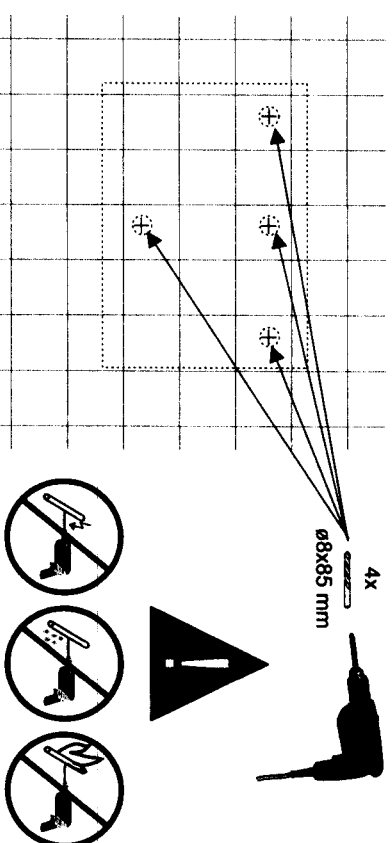


STEP 3

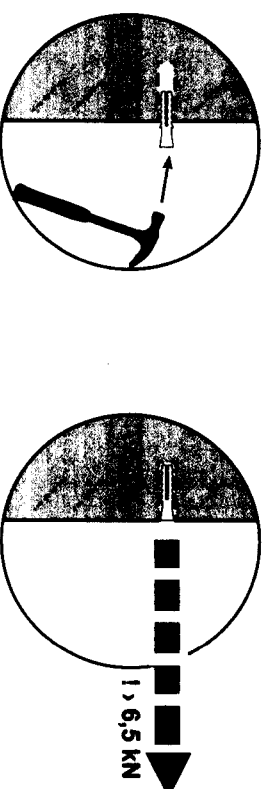


The screws and bolts included in the seat package are suitable for classical brick or concrete bathroom walls. For walls from other materials (e.g. gypsumboard or similar) you therefore need to use connections of appropriate construction and bearing power. The plugs must have minimum bearing power 6,5 kN.


STEP 4

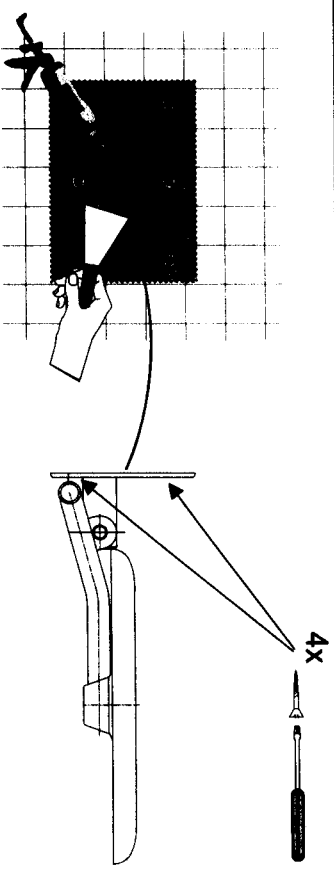

STEP 5

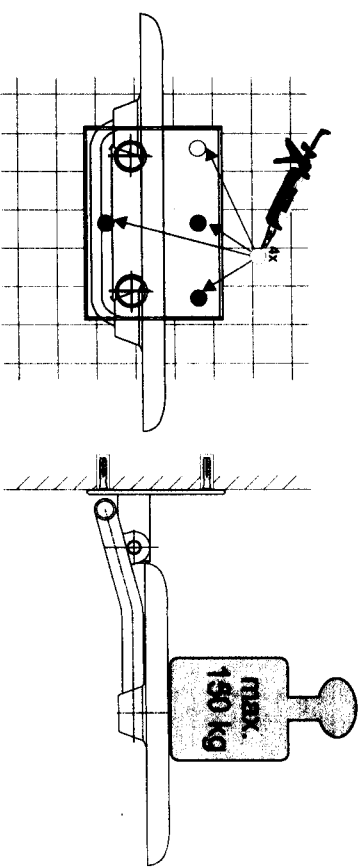

STEP 6

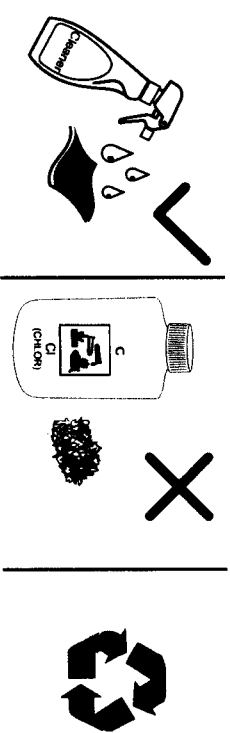

For any further information please contact
Simpsons on: **0845 873 5808**

Or visit our web-site at www.simpsons-enclosures.co.uk
The manufacturer reserves the right to make technical
modifications without prior notice.