


# Assembly drawing

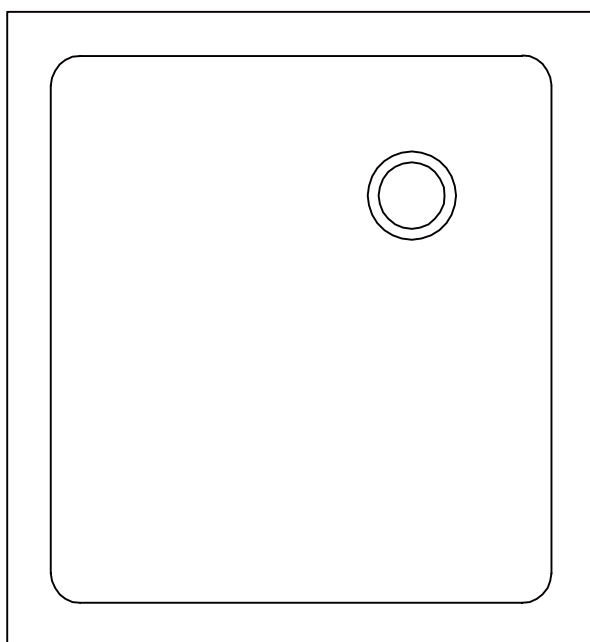

# Installation steps

## Step 1

- Dig a pit to install tube and drain

## Step 2

- Press the flat seal from above into the drainage outlet, press siphon body from below onto the drain and fasten tightly with the drainage valve from above.
- Connect the sewage hose to the siphon body and connect with in-house sewage system.
- Insert cleaning bit, press the cover on.

## Step 3

- The tub is to be aligned with vertical walls in a 90 degree angle by means of a spirit level.
- The joints are to be filled with silicone. Select type of silicone in accordance with construction material used. Please mind curing times.

