



INSTALLATION INSTRUCTIONS

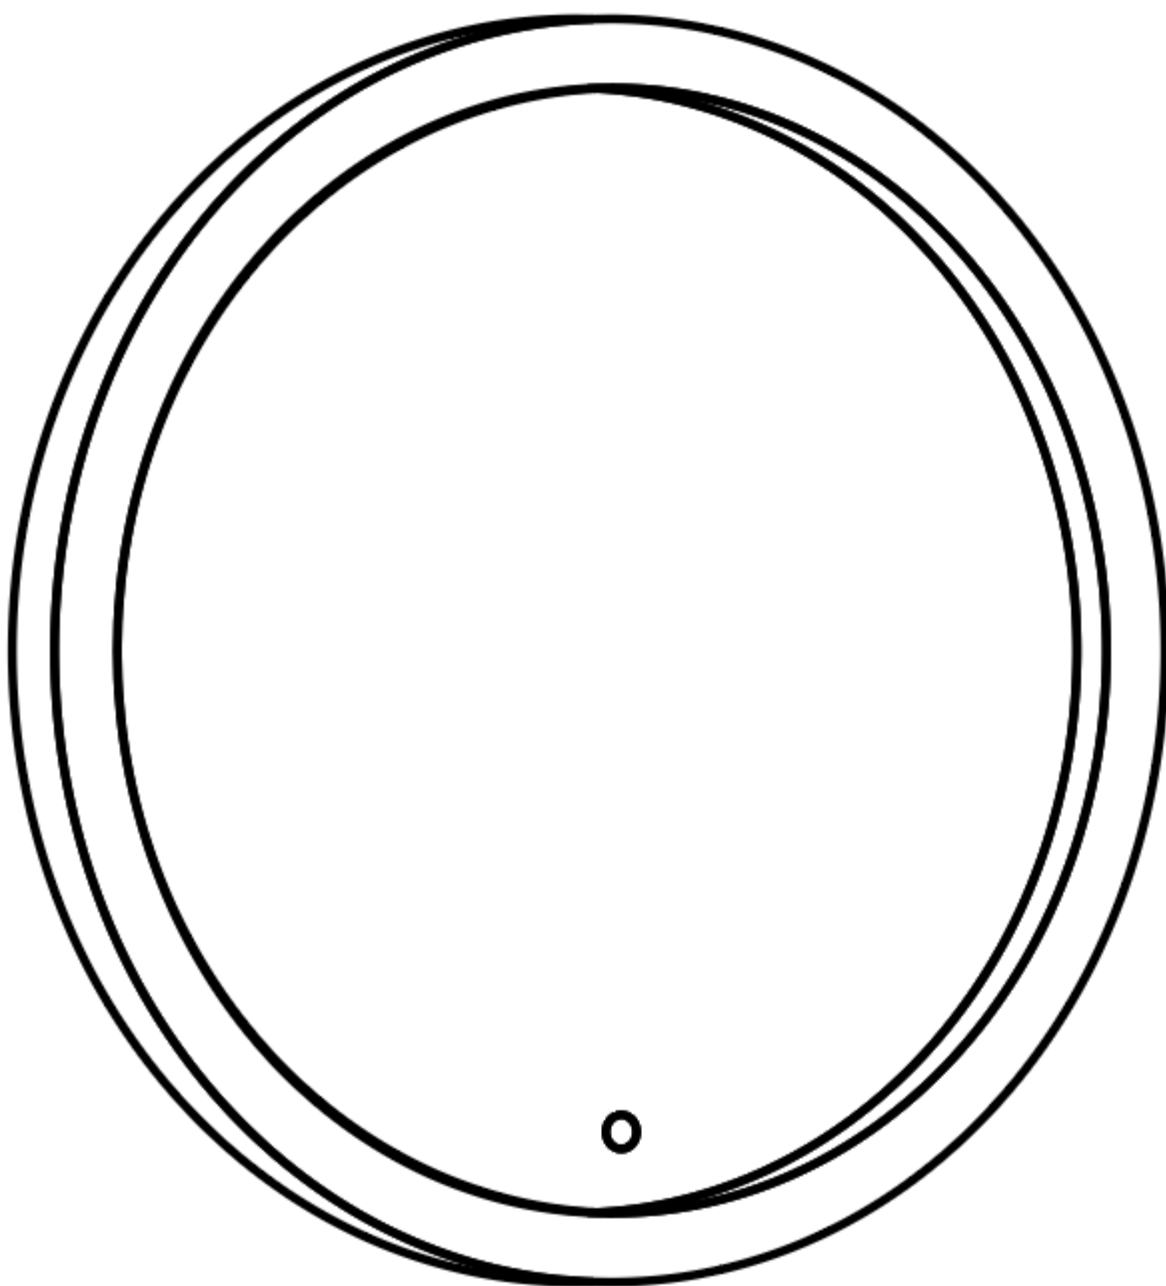

adema

Wall Installation

1. Position the mirror in a suitable location
2. Mark the position of the mirror ensuring it is level. Remove the mirror and mark the mounting points.
3. Using a suitable drill bit, drill holes in the marked positions to a suitable depth.
4. Insert wall plugs level with the surface of the wall.
5. Screw supplied fixings into wall plugs.

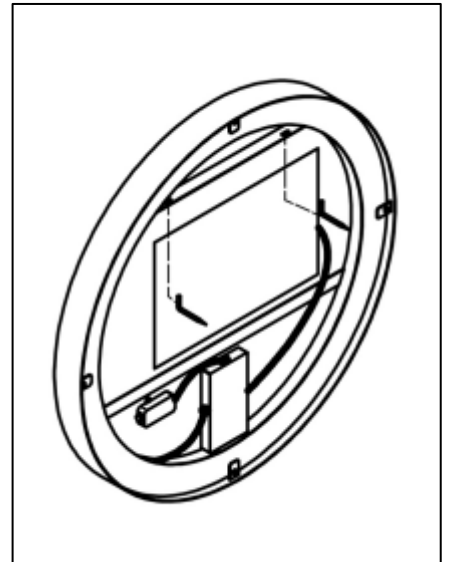

Electrical installation

1. Electrical bathroom products should only be fitted by a suitably qualified electrician.
2. Ensure the domestic electrical mains supply to which the mirror is being connected is turned off. Connect the domestic mains supply to the terminal box according to the wiring diagram.
3. Move cables away from hot spots.
4. Avoid leaving cables tightened.
5. Check the electrical installation is not damaged by fasteners.
6. Do not cover the luminaire.
7. Do not hang items on the luminaire.
8. Contact the distributor if you need to replace the luminaire or any damaged part.

Rear view / Electrical installation

