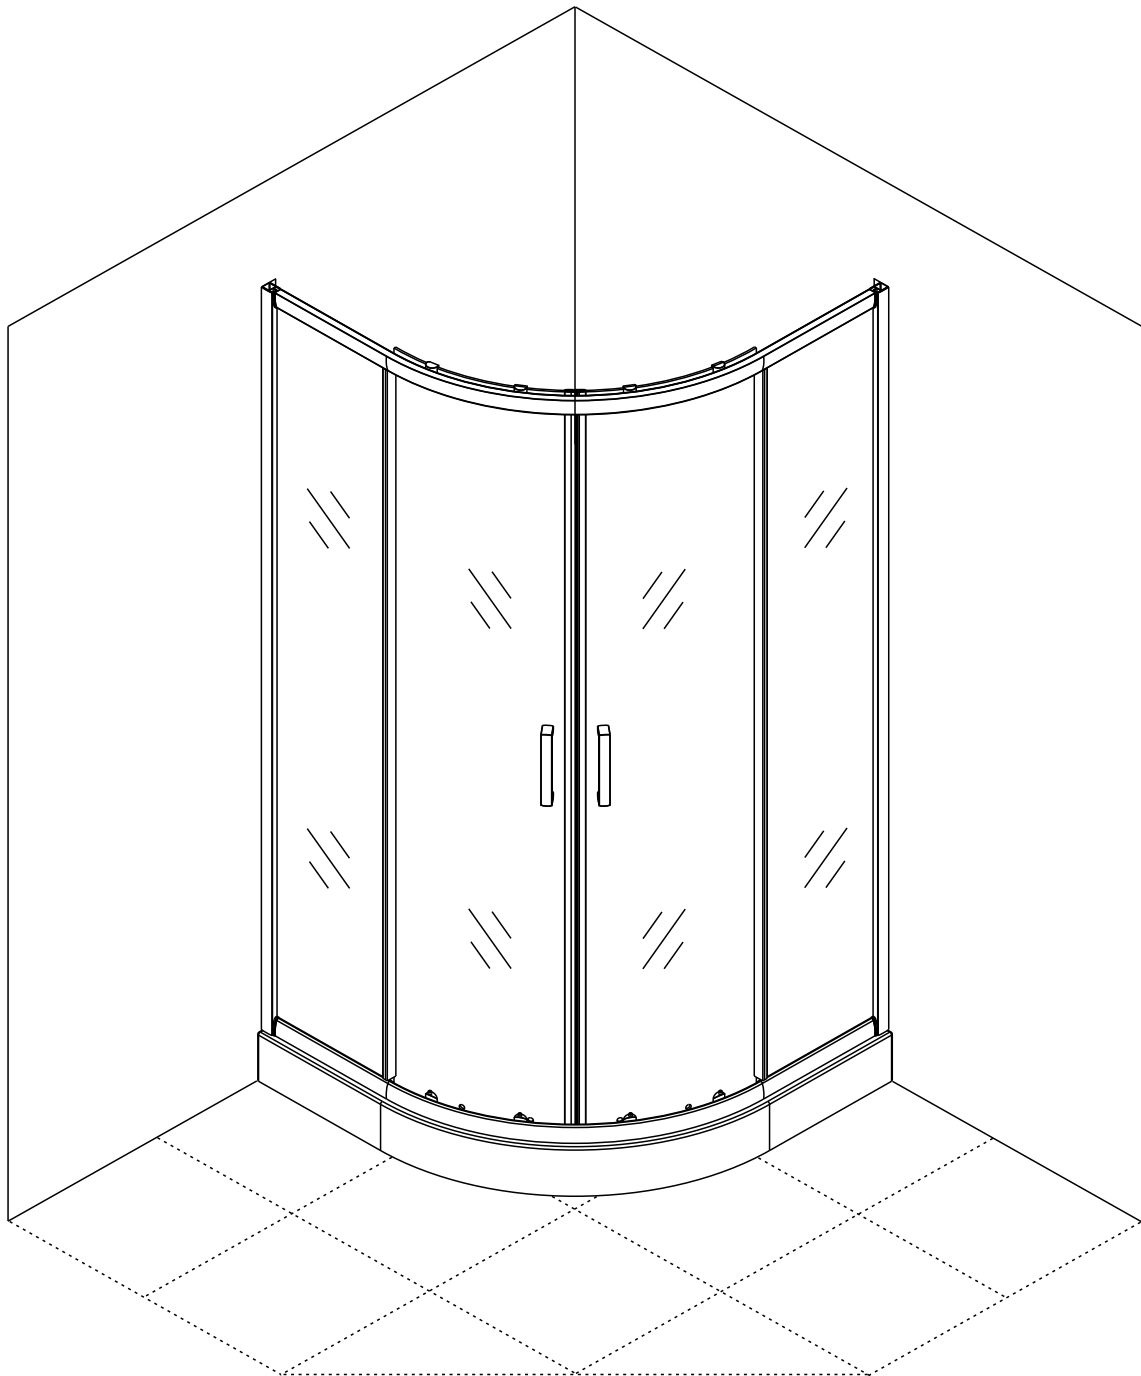



INSTALLATION INSTRUCTIONS

SHOWER ENCLOSURE





GENERAL INFORMATION

Please inspect the product immediately upon receipt for transit damage, missing packs or manufacturing fault. Damage reported later cannot be accepted. Please handle the product with care avoiding knocks and shock loading to all sides and edges of the glass.

NOTES: Safety glass can not be re-worked

Please read these instructions carefully before starting installation.

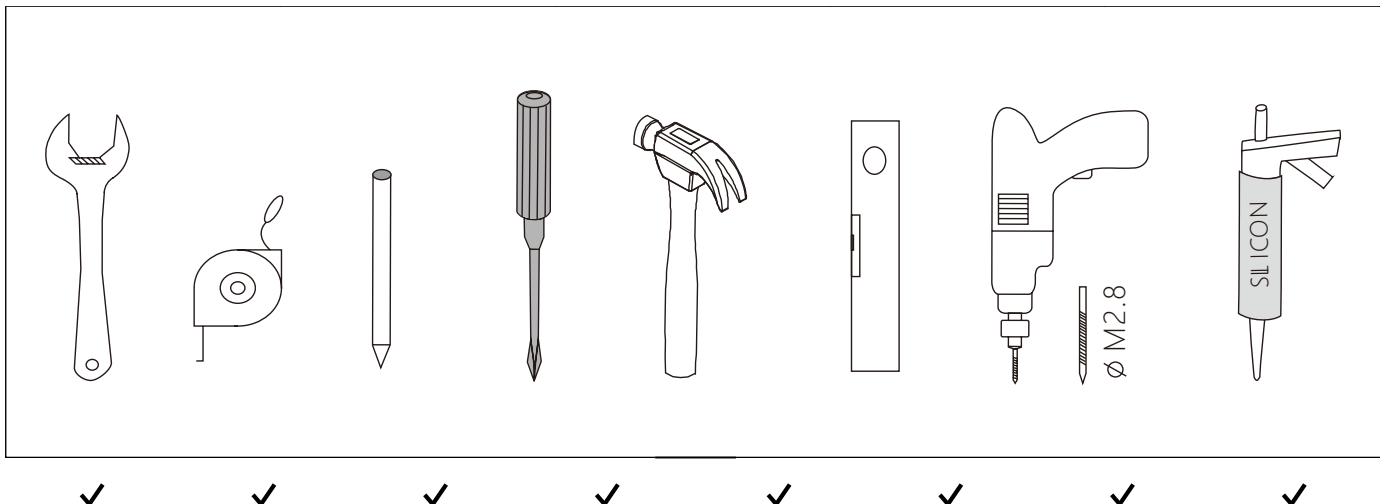
Special care should be taken when drilling walls to avoid hidden pipes or electrical cables. Note: this product is heavy and may require two people to install.

AFTERCARE INSTRUCTIONS












After use, your shower should be cleaned with soap and water. This is particularly important in hard water districts where insoluble lime salts may be deposited and allowed to build up. Cleaners of a gritty or abrasive nature should not be used. Care should be taken to avoid contact with strong chemicals such as organic solvents and strippers.


Glass cleaners can be used but with caution; if in doubt, contact the manufacturer of the cleaner in question. Please keep these instructions for aftercare and customer service details.



TOOLS THAT MAY BE REQUIRED



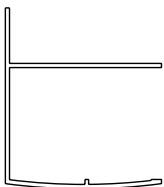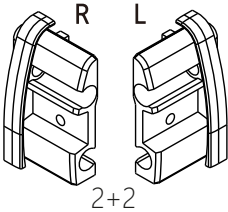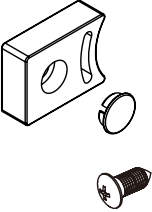This product is heavy and may require two people to install. Wear gloves and eye protection, and wear sturdy safety footwear while handling the glass panels.

				
A1=2	A2=2	A3=2	A4=2	A5=2
				
A6=4	A7=4	A8=4	A9=4	A10=8 ST4*10=8
				
A11=2	A12=2	A13=2	A14=2	A15=6
				
ST4*30=6	ST4*8=16	ST4*9=10	ST4*9=4	A16=2+2

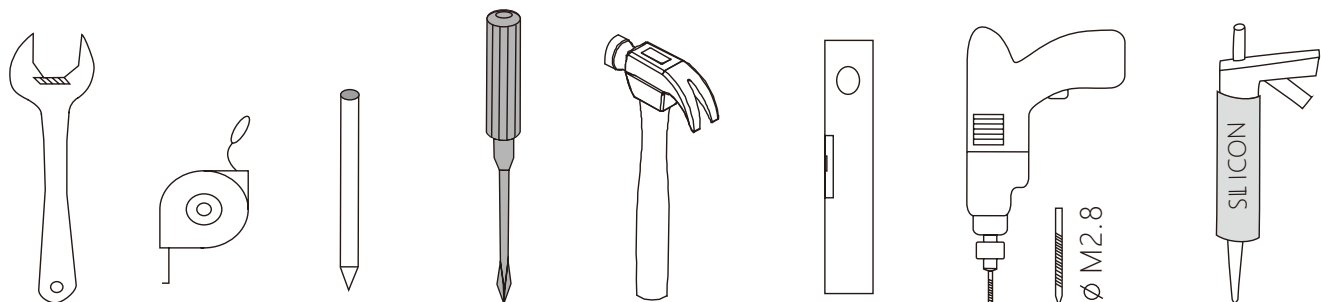

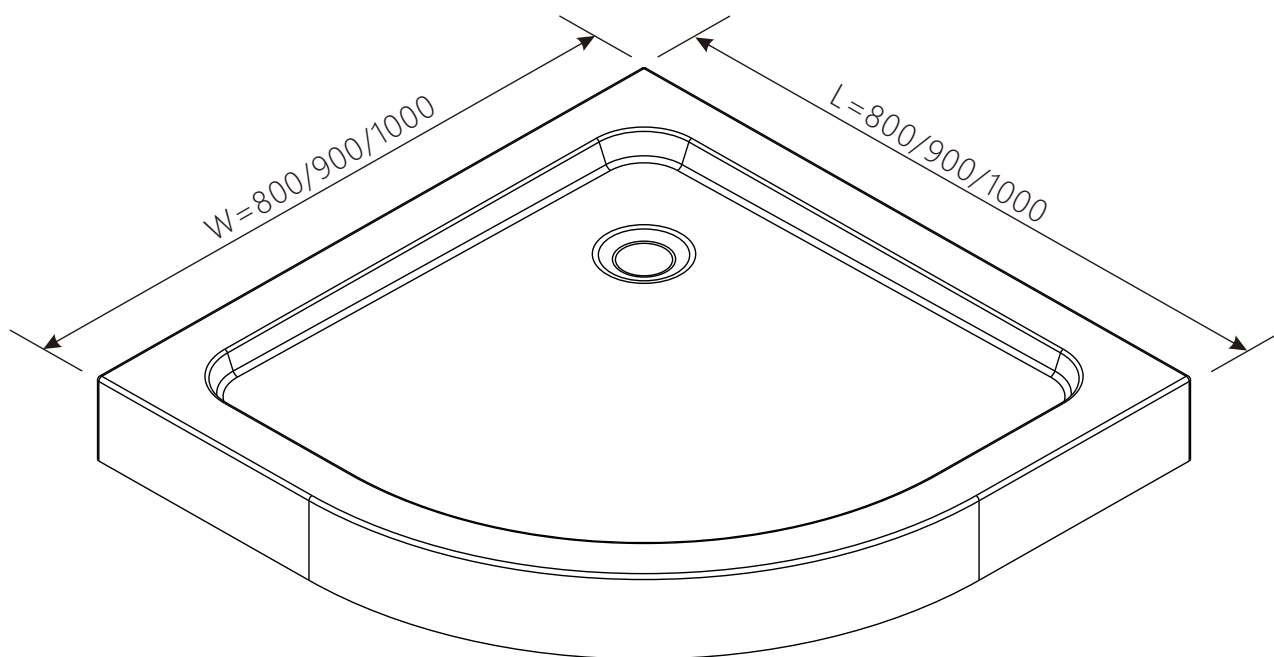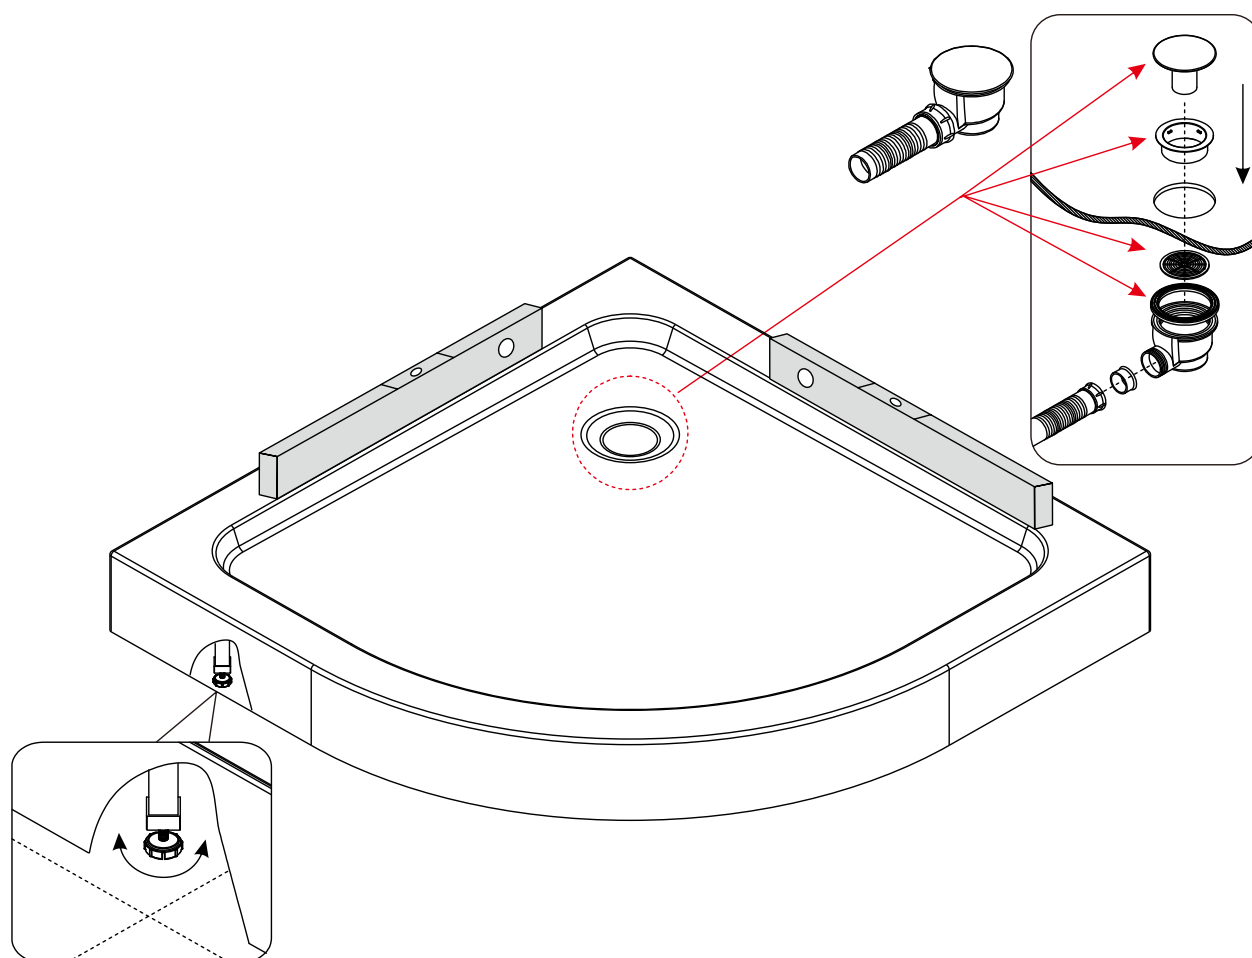

W=780~800
W=880~900
W=980~1000

