

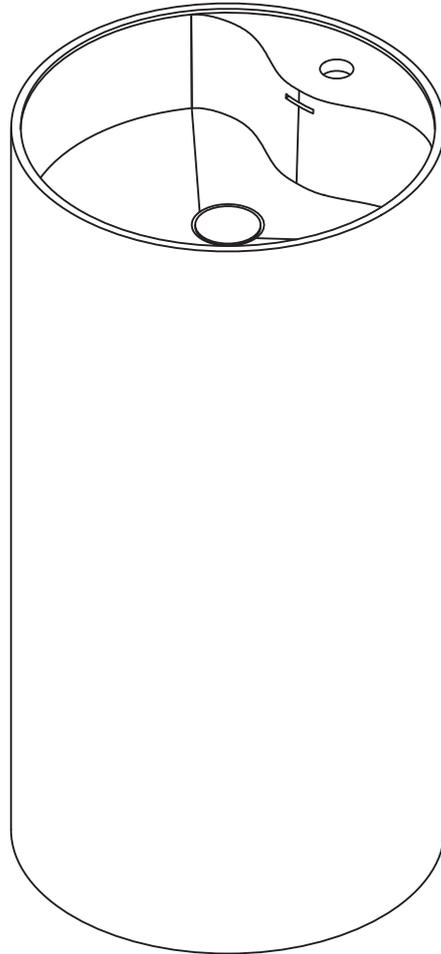
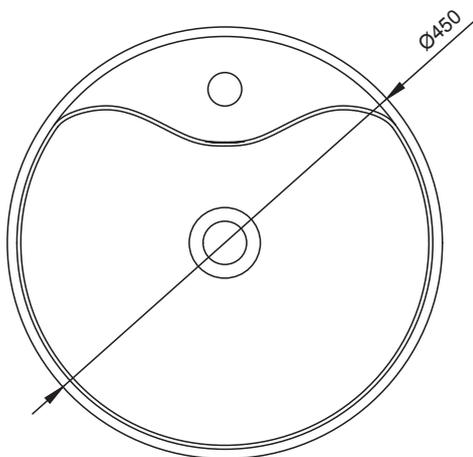


Code 283811
Solidroll Pedestal


Installation Guide

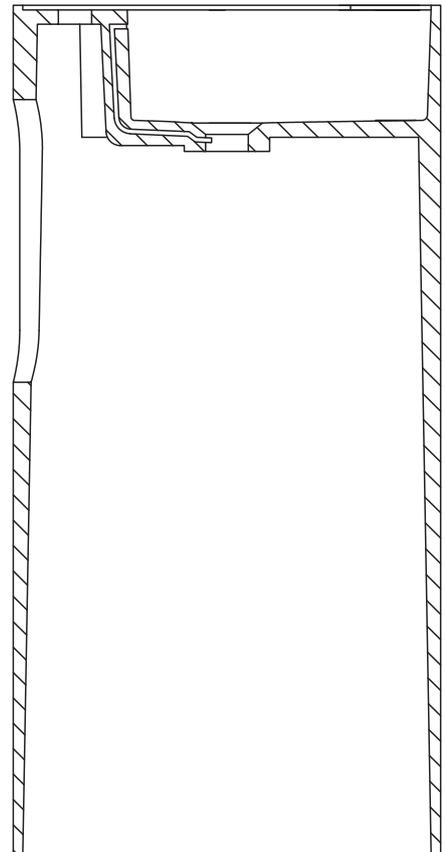

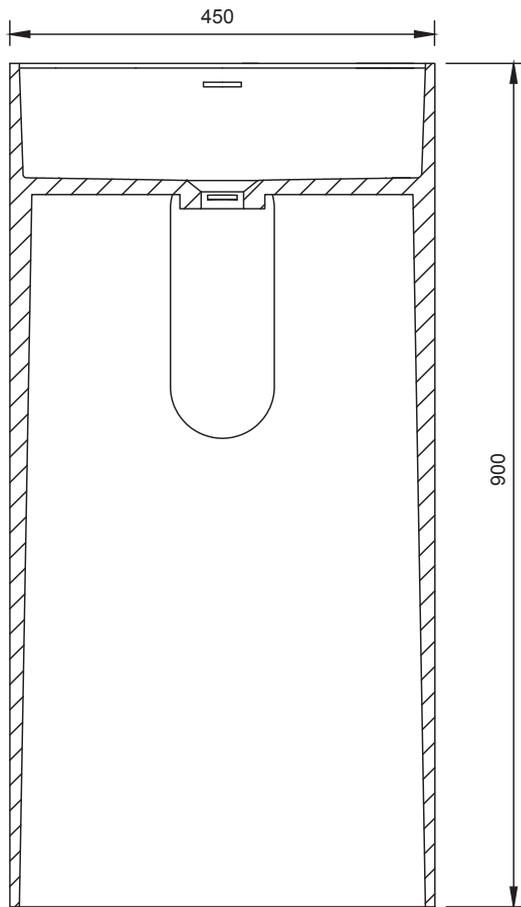


1. Place the pedestal basin at the final position (it is recommended to reserve water outlet and drain hole at the placement point).

Note: The product does not need to be fixed by other means. Just select a flat and solid place to place it.


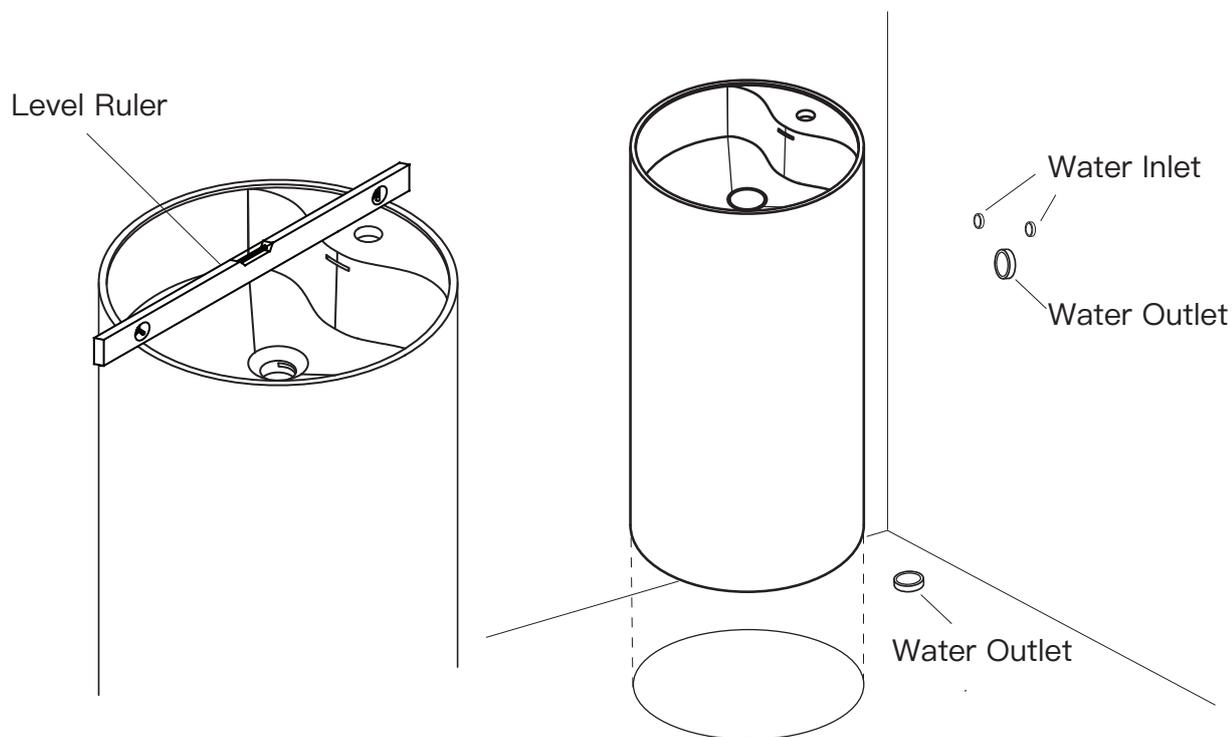


2. Install the Pop-up Drainage

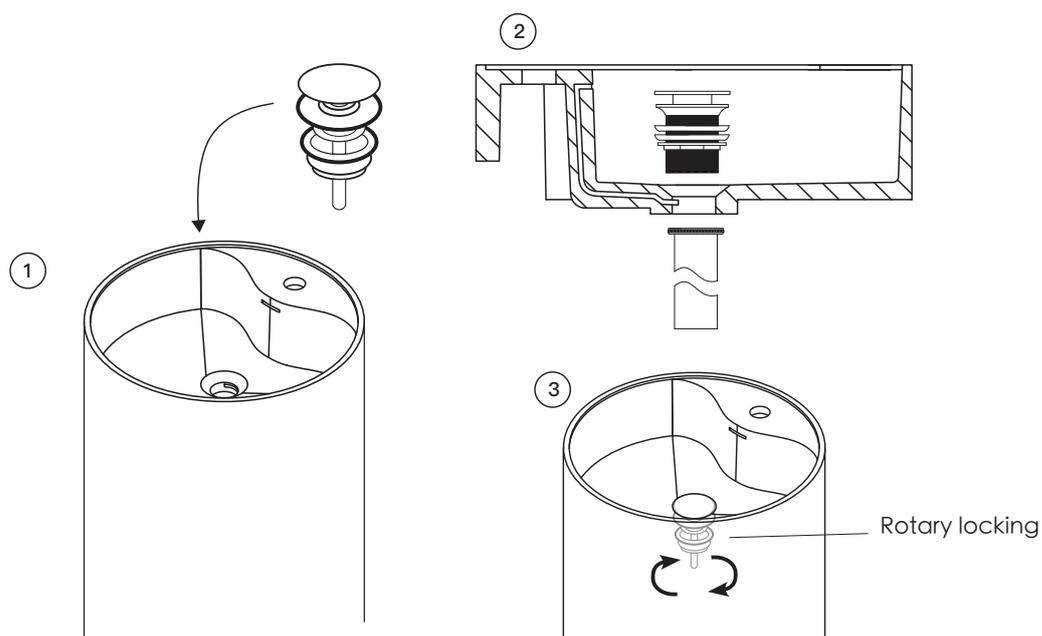

3. Connect the drain of the pedestal basin with the drain hole on the wall or ground through drain pipe.

Note: The drain hole on the wall or ground needs to be reserved.

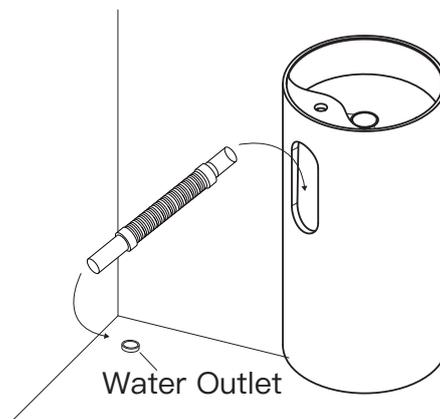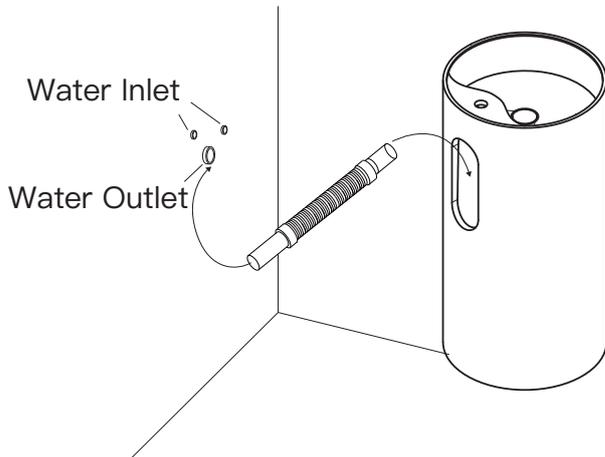

4. Install the Faucet on the basin in case there is a faucet hole opened in the basin.

