


INSTALLATION MANUAL

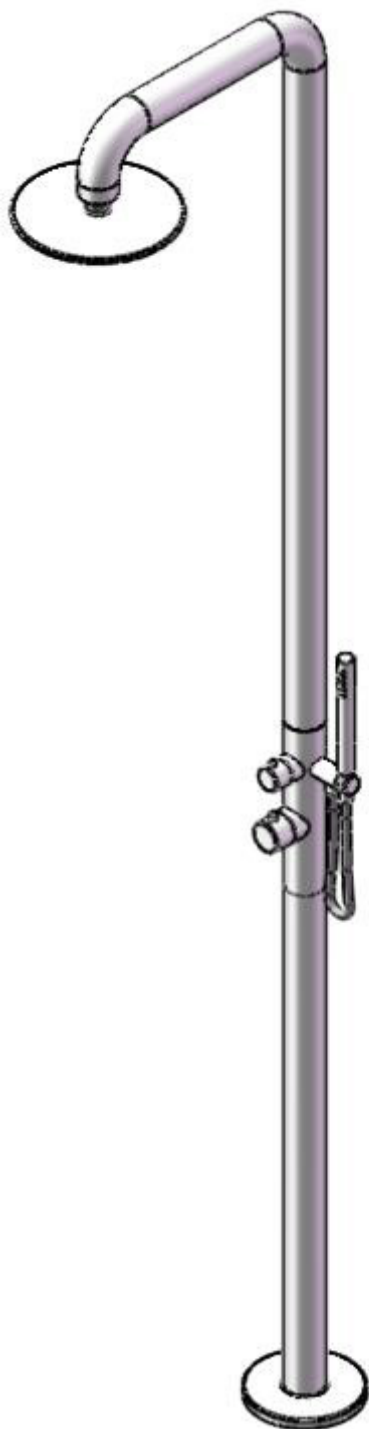

fortifura



①


Confirm positions for embedded C-box and shower place then dig holes based on C-box size.

vertical to shower place

for cold water


for hot water

shower place

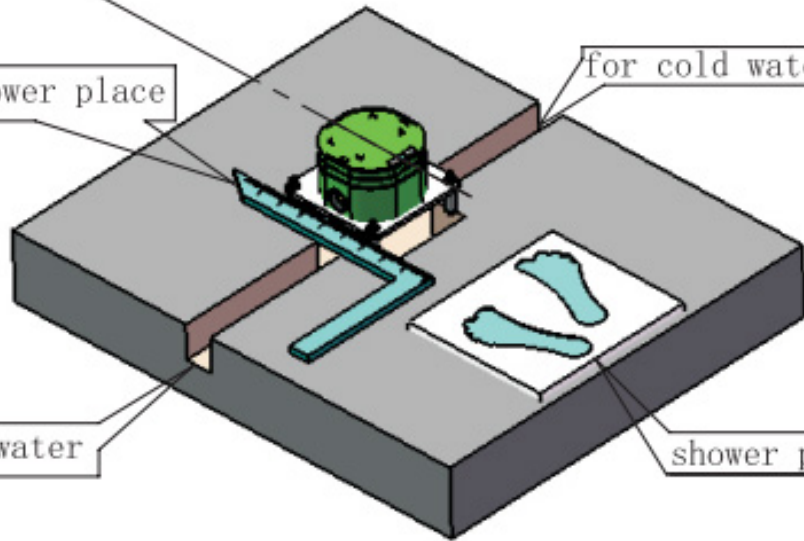



②

Connect hot and cold water pipes to the embedded C-box, make sure no leaking.

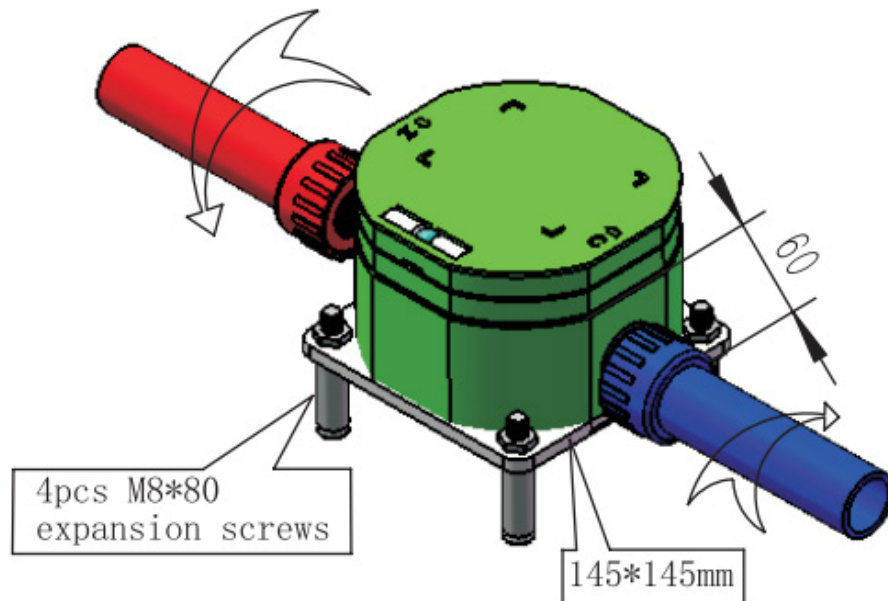




③

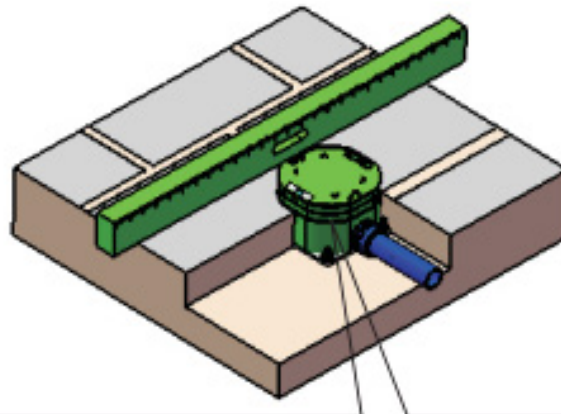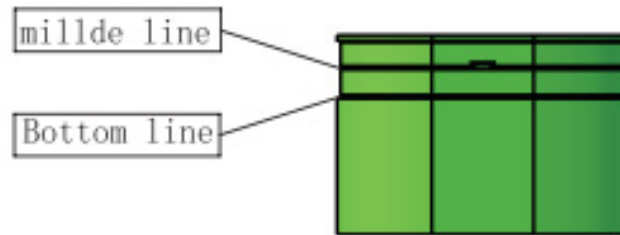

Make sure C-box is vertical and centered to you.
Tighten up C-box to hole bottom with 4pcs M8 expansion screws,
make sure floor tile must be higher than bottom line and lower
than middle line of C-box.

④


Save well for C-box cover and two plugs, as you need to
put them back when you took back shower faucet in Winter.
Cut the extra top part of C-box if you think it's too high.

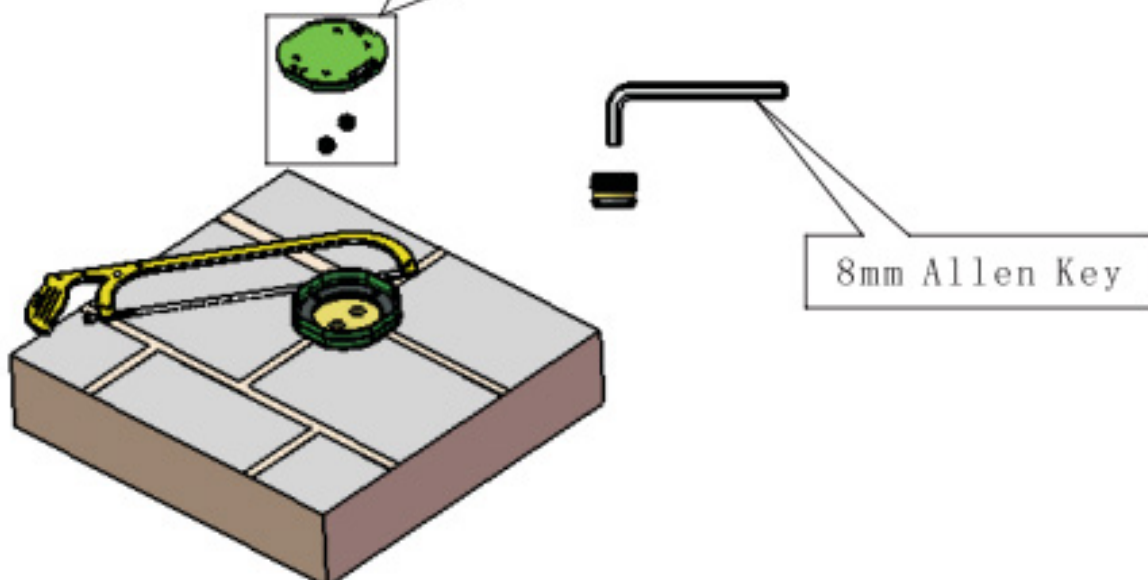



⑤

Insert lower pipe to the C-box, connect bottom plate to C-box with 4 screws, then push down the bottom decorated cover to floor.

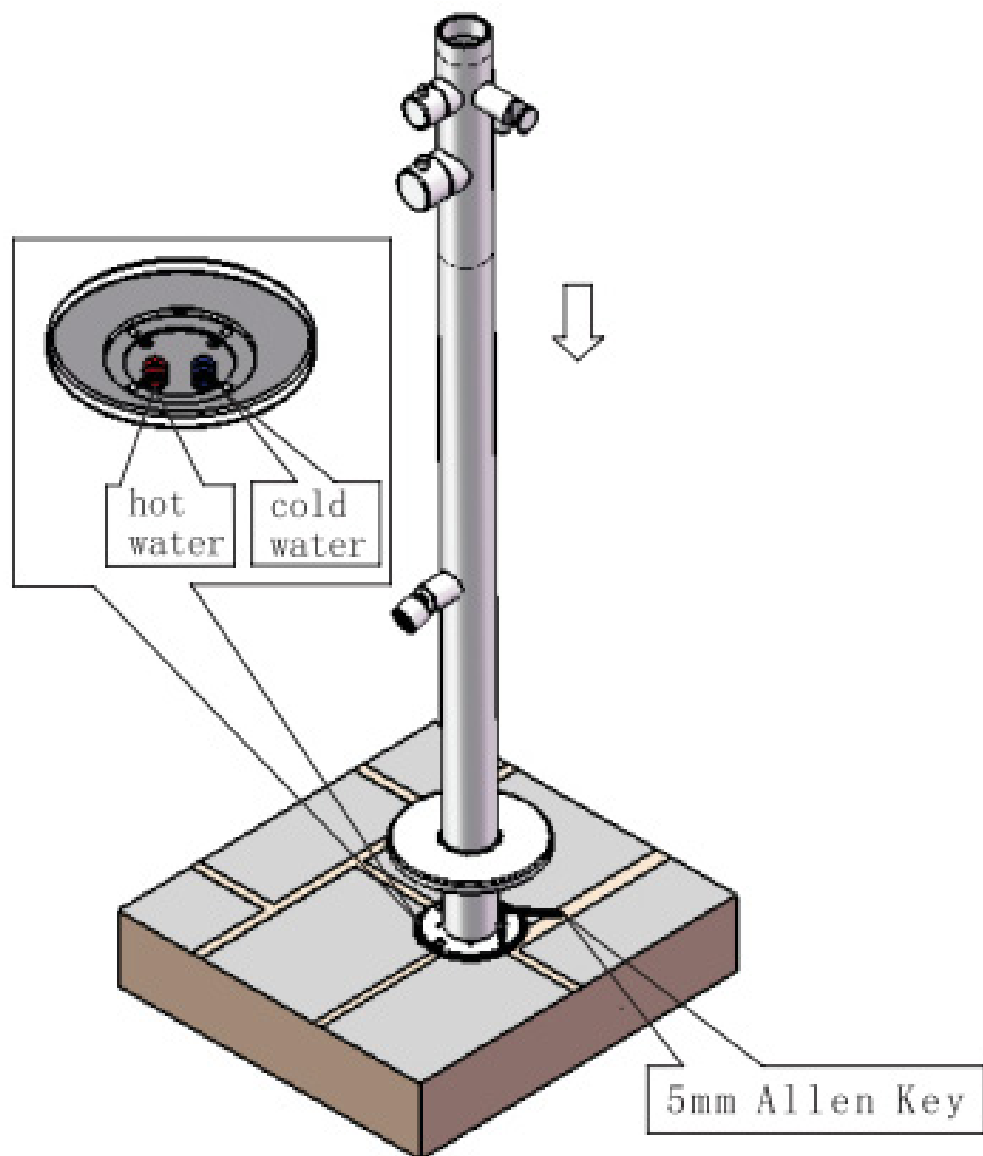



6

Insert upper pipe into the lower pipe,
match back lines on two pipes together to be one rectangular,
and lock screw in back pipes to get installation done.

Connect handshower with flexible hose if have.
(if items have spout, pls note we already got it installed.)

