




fortifura




①

Dig hole based on below size of embedded part, after you confirmed the positions for embedded part and bathtub.

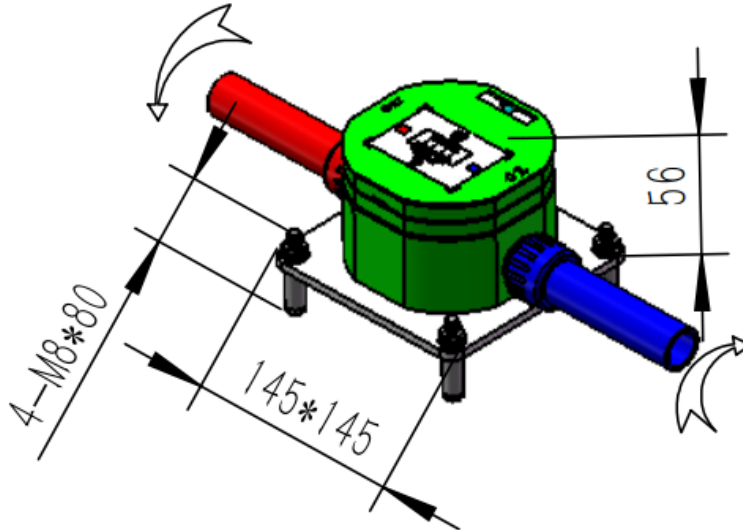

②


the line of two screws must be vertical and centered to bathtub faucet.

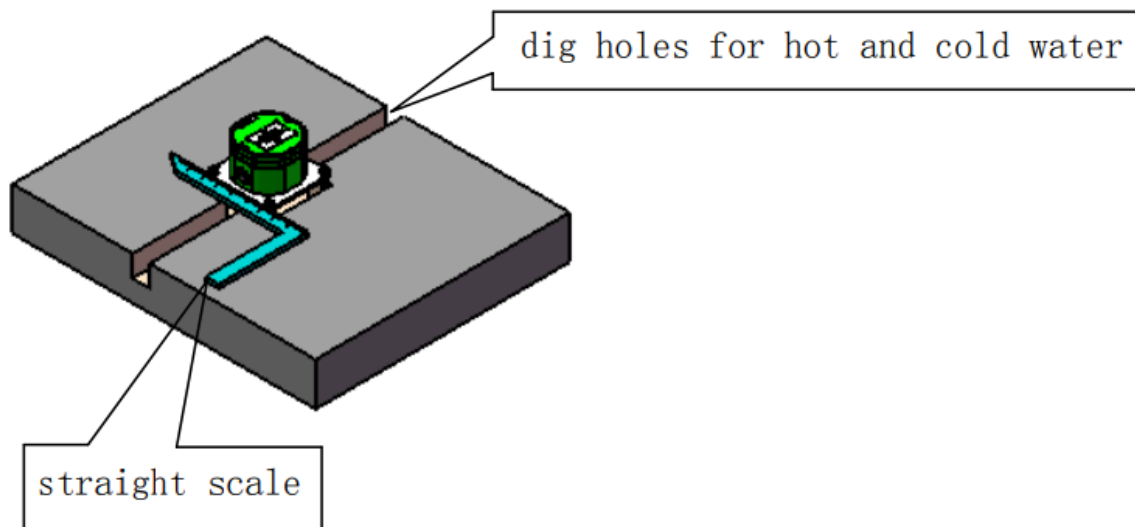

fortifura




③

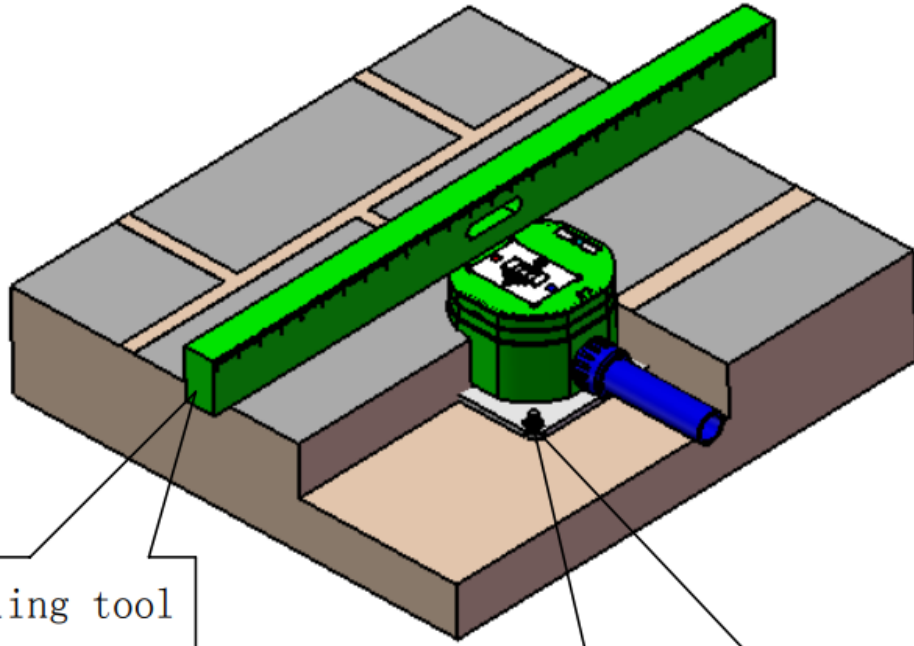

levelling tool

connect water pipe to the embedded part, tight up embedded part to hole bottom with screws, and make sure the cover of embedded part must be same level or 1-3mm lower than floor tile.

④

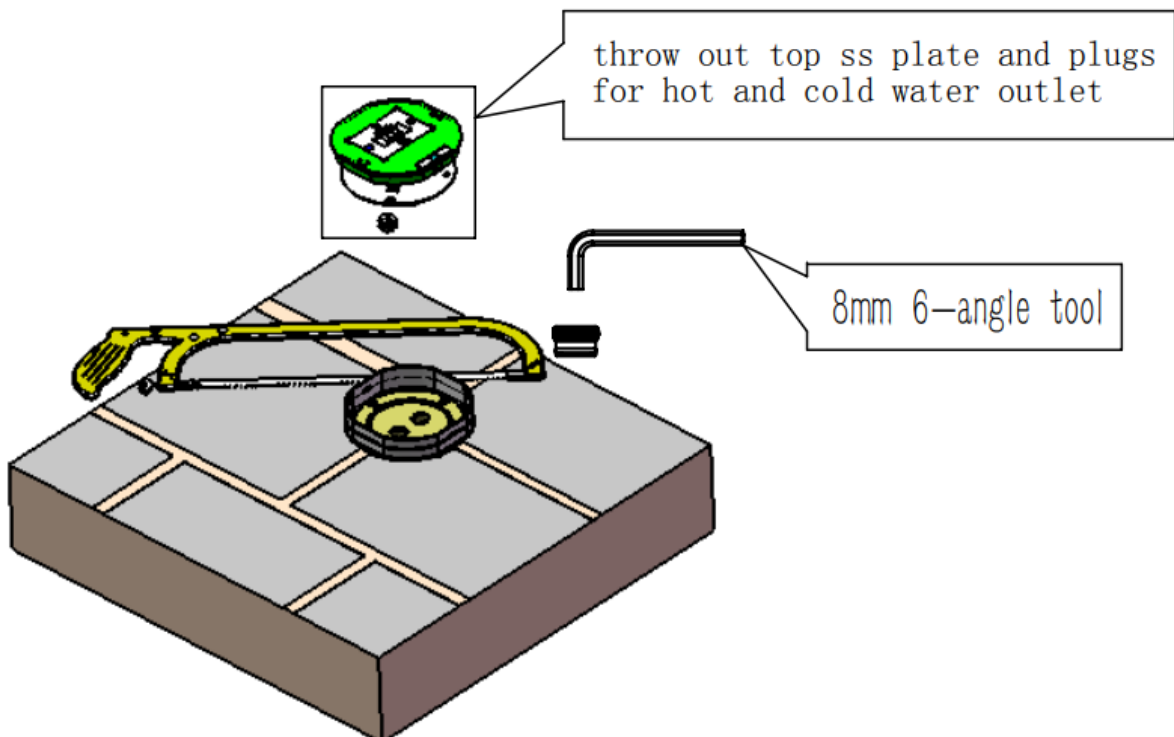

throw out top ss plate and plugs for hot and cold water outlet

8mm 6-angle tool


fortifura



⑤



Insert lower pipe to the embedded part, connect bottom plate to embedded parts with screws, then push down the bottom decorated cover to floor.

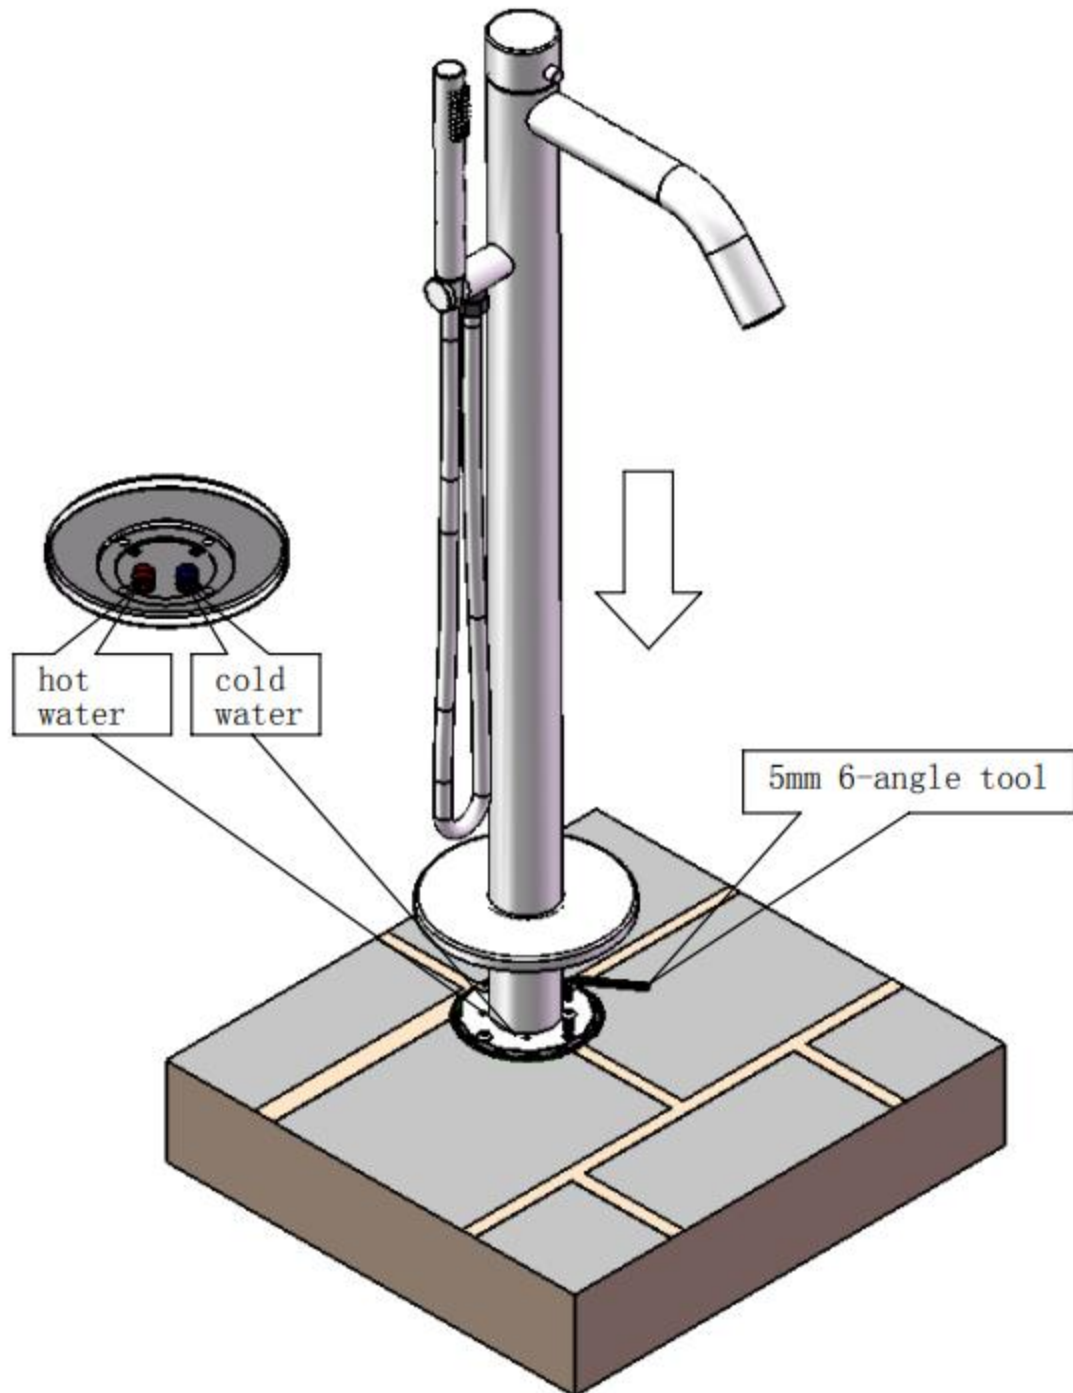


fortifura



⑥


connect hand shower and hose to the
handshower outlet, then you can
have water for bathtub.

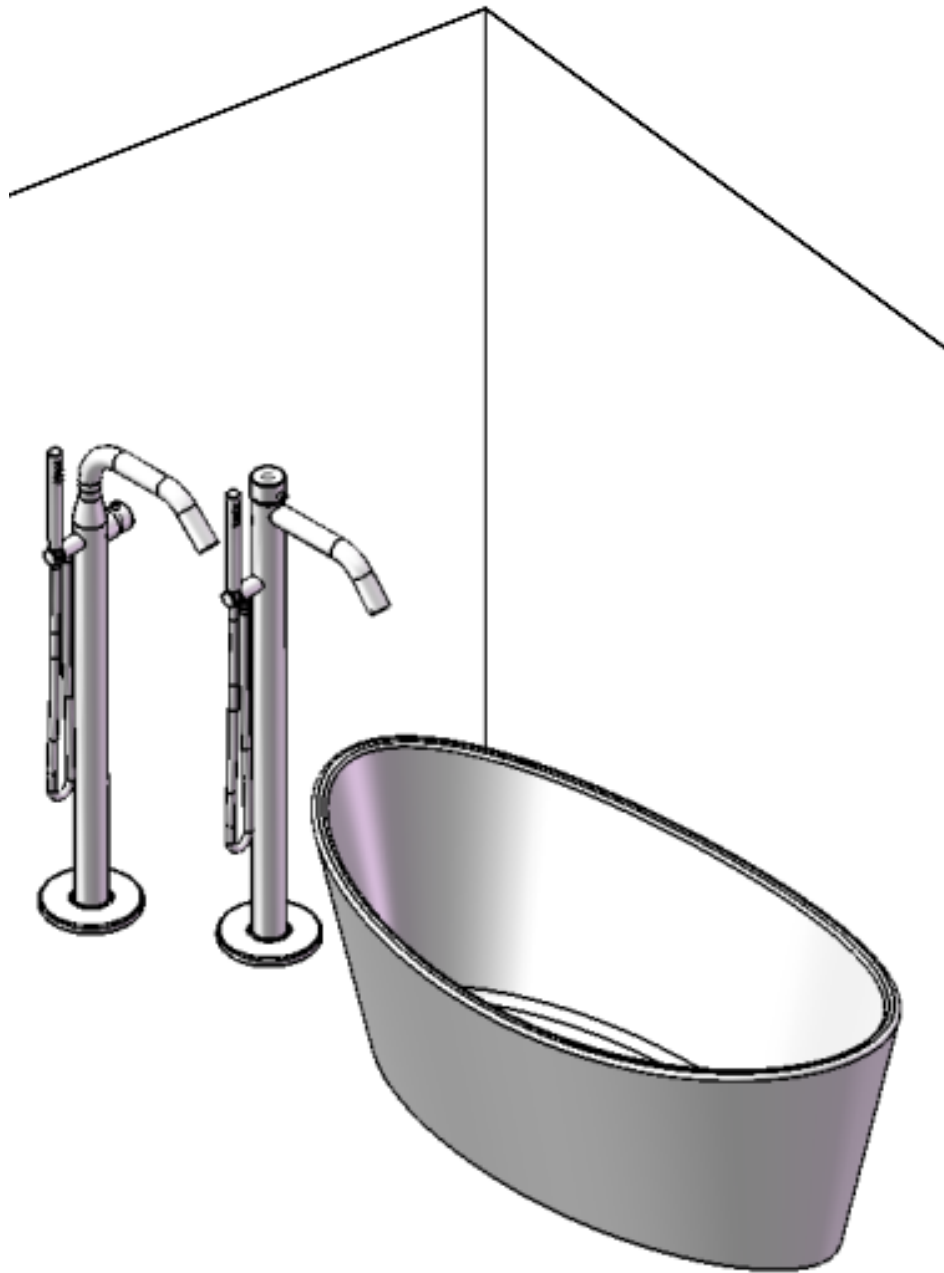

fortifura



OFF

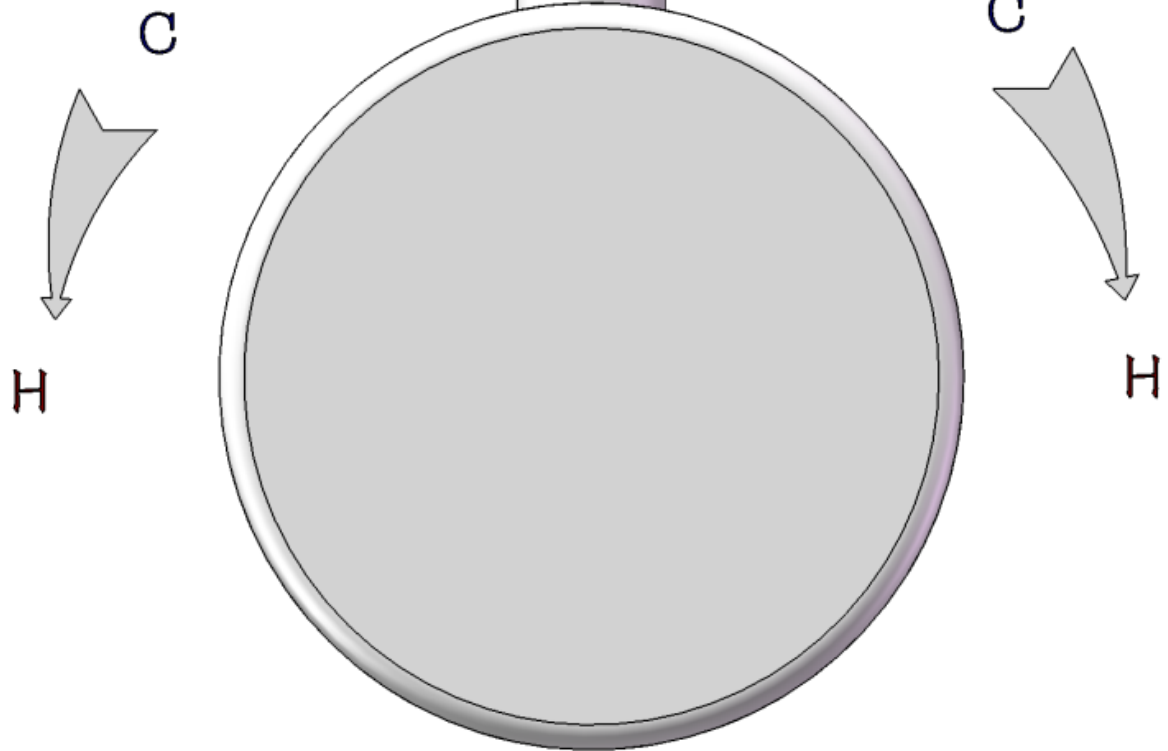

fortifura