









## INSTALLATIE VOORSCHRIFT

# ECO HOEKINSTAP met profiel


900x900x1900mm


(885-900) x (885-900) x 1900mm


















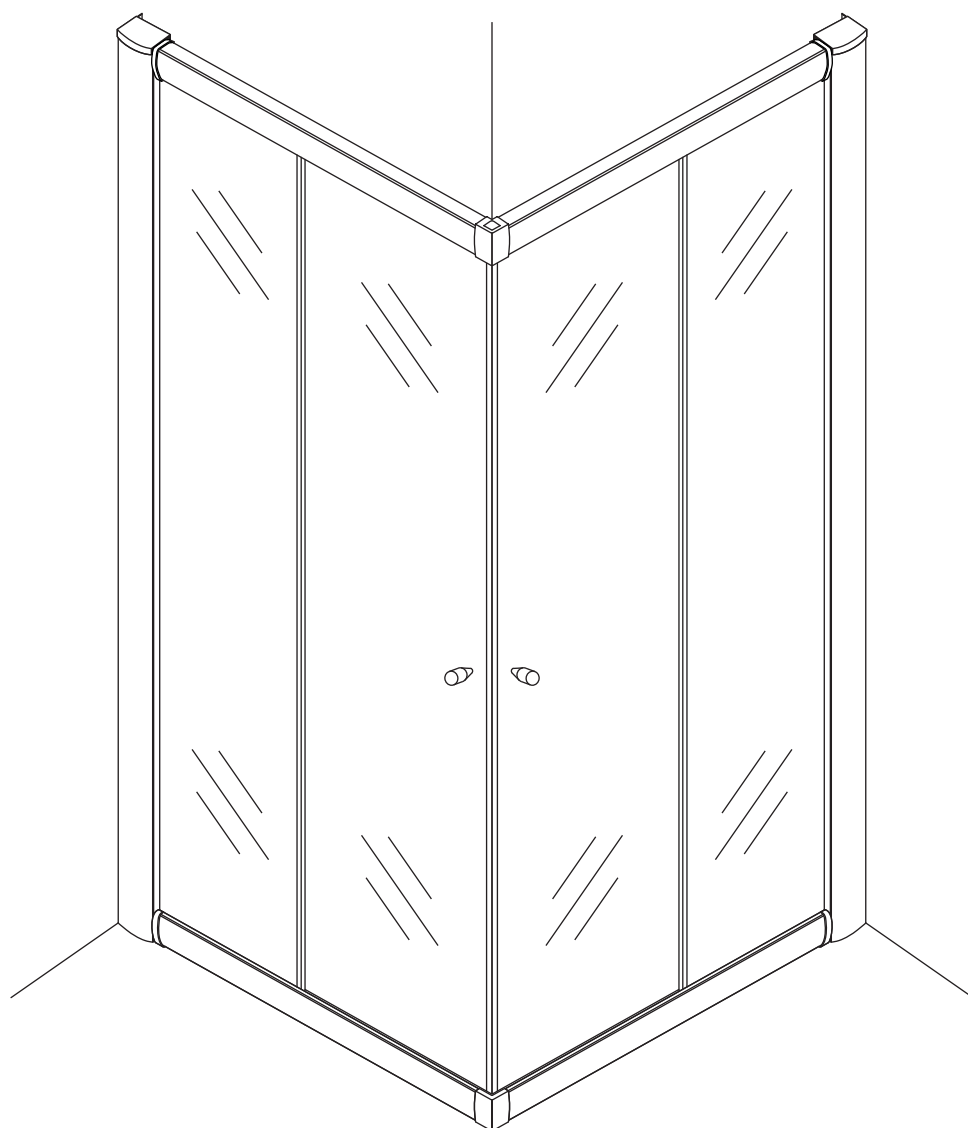


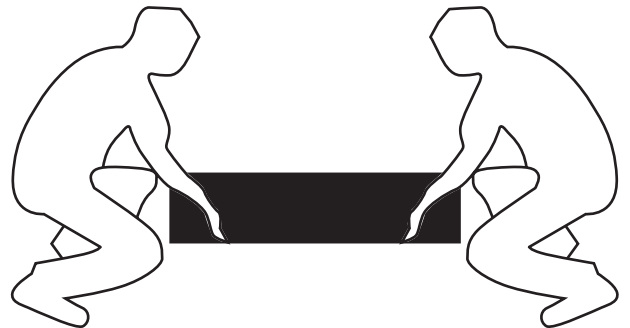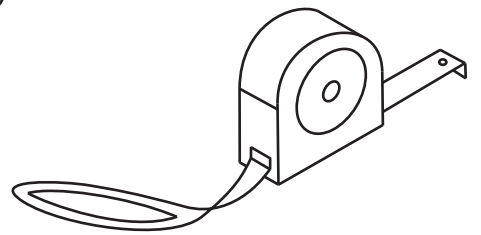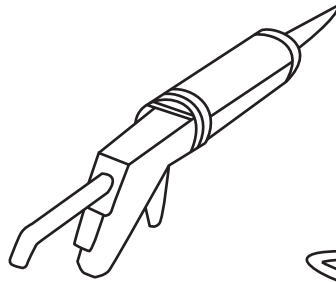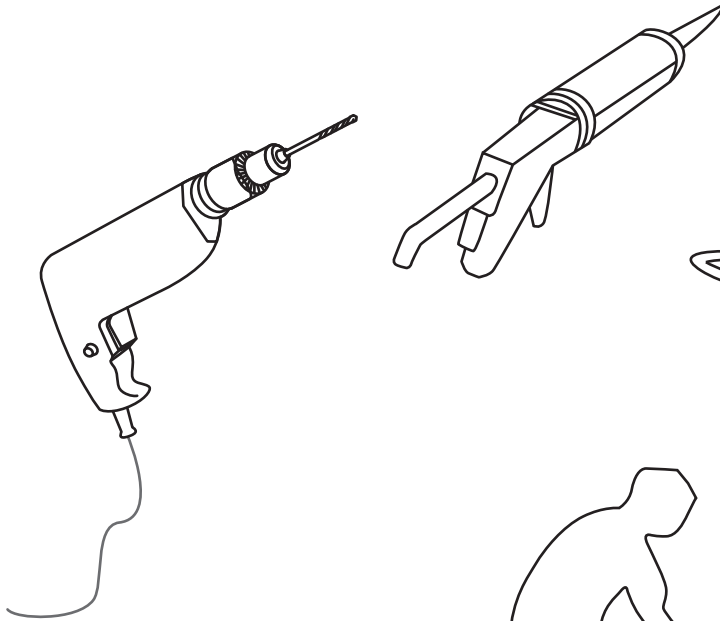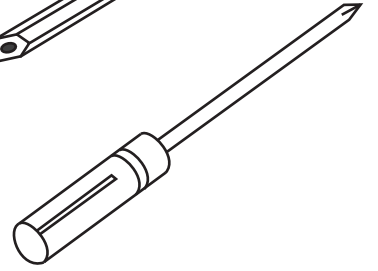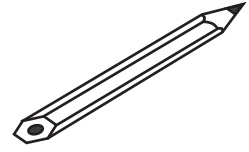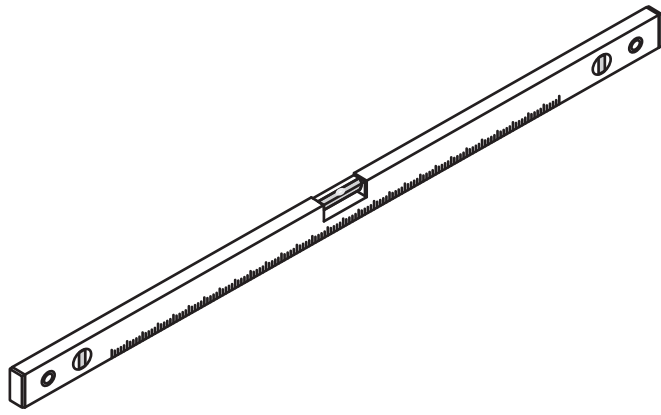

1



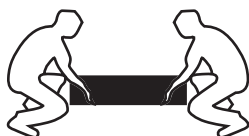






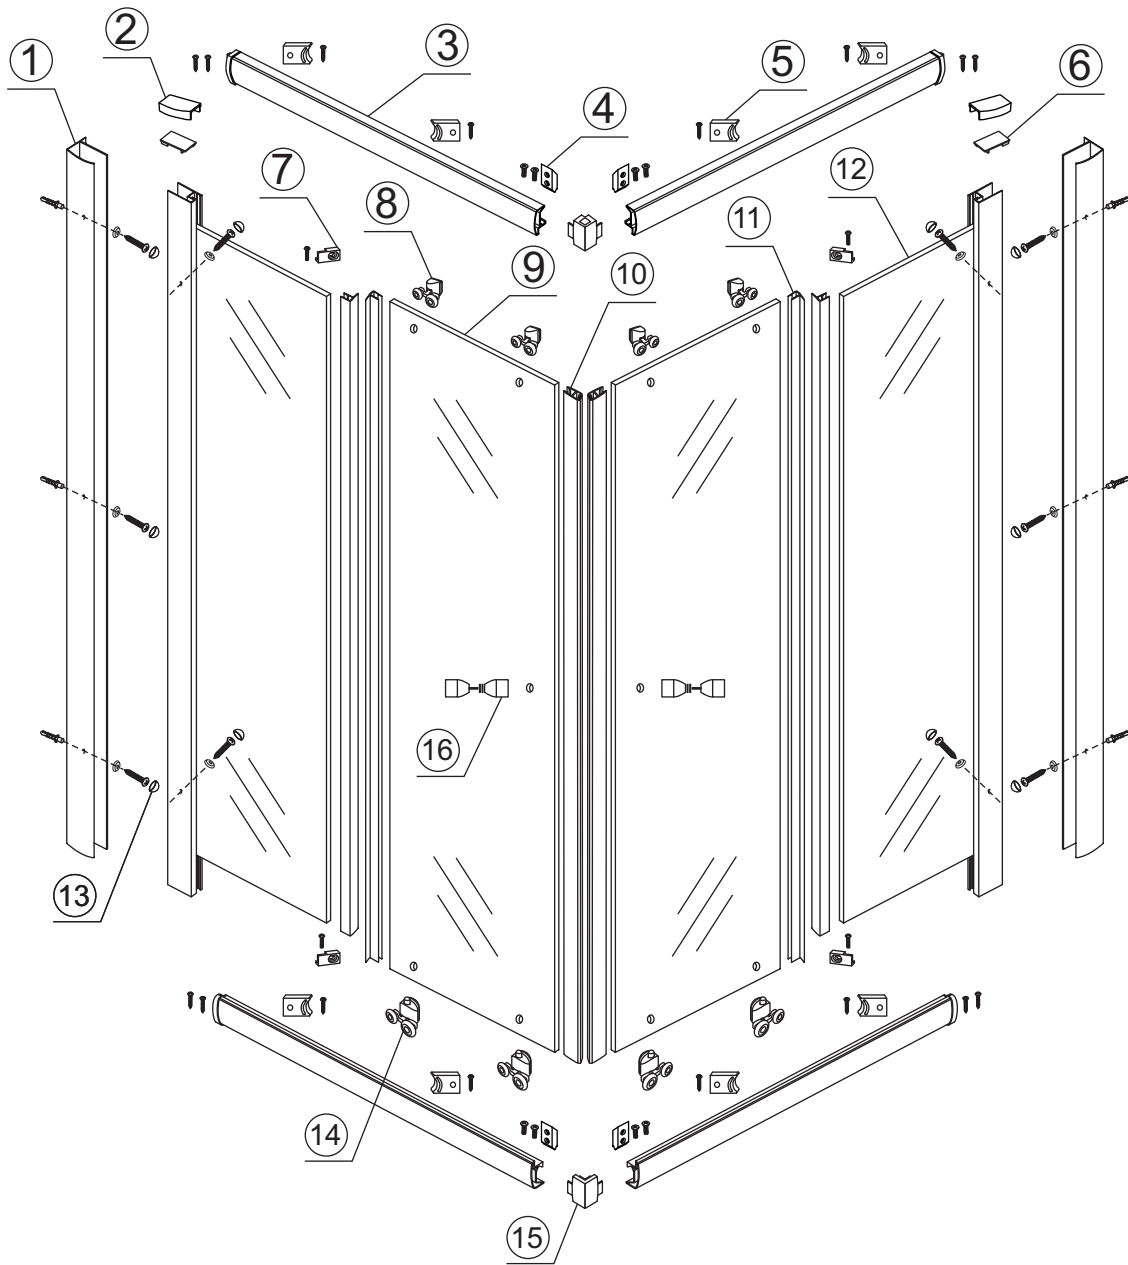


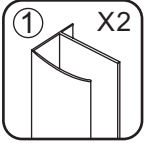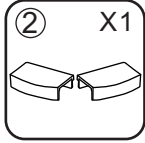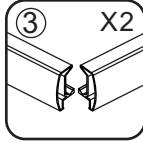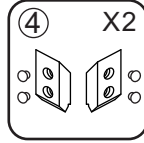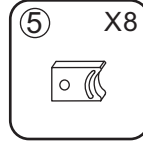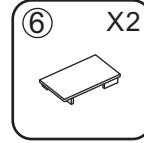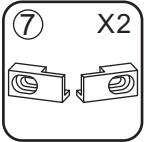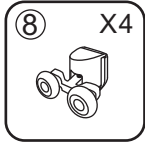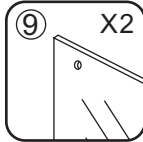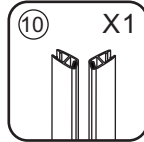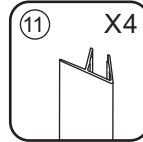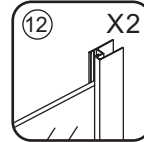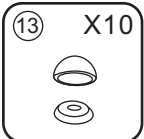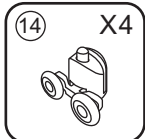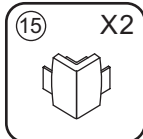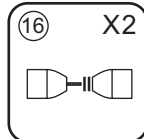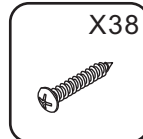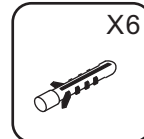 ① X2	 ② X1	 ③ X2	 ④ X2	 ⑤ X8	 ⑥ X2
 ⑦ X2	 ⑧ X4	 ⑨ X2	 ⑩ X1	 ⑪ X4	 ⑫ X2
 ⑬ X10	 ⑭ X4	 ⑮ X2	 ⑯ X2	 X38	 X6






3




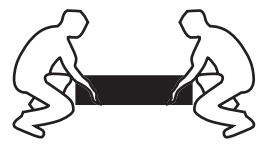
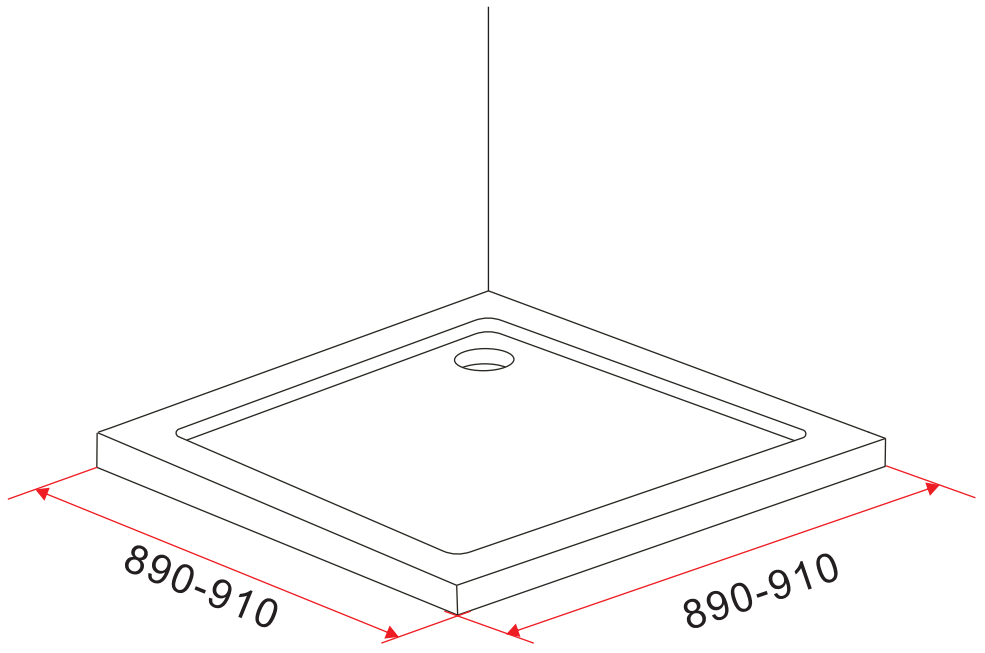
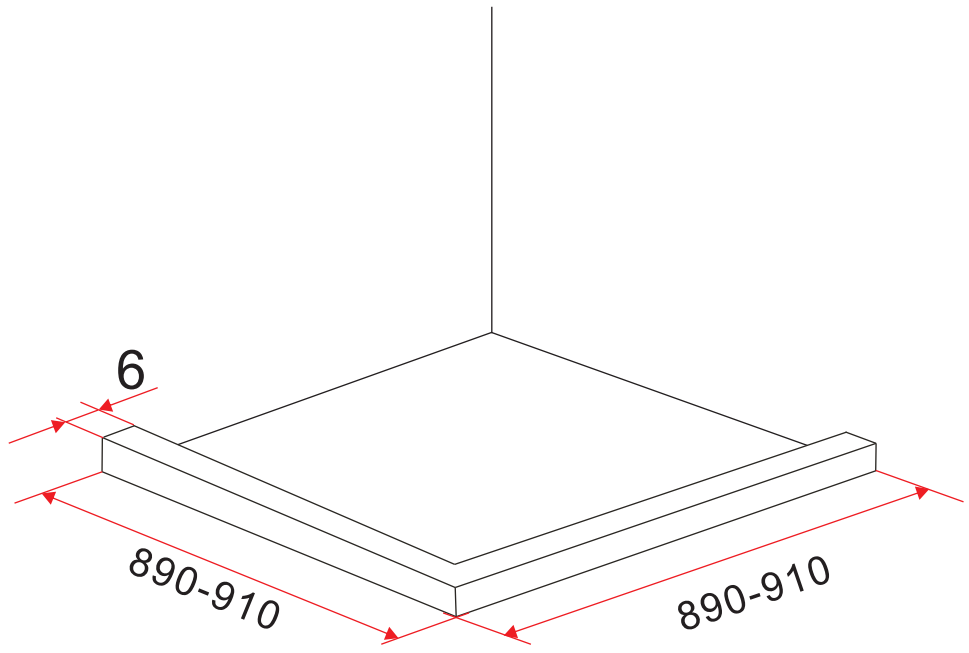


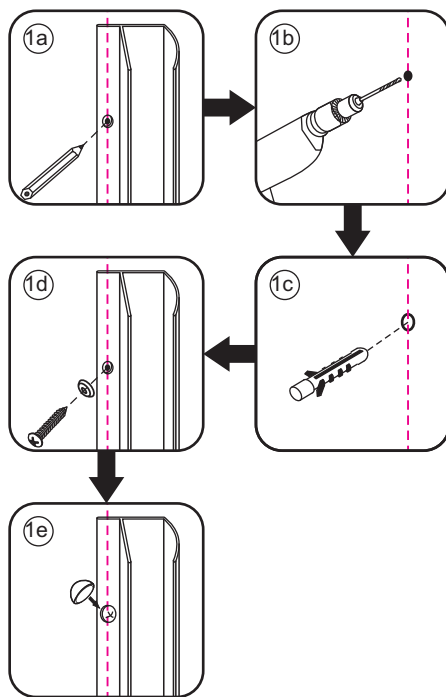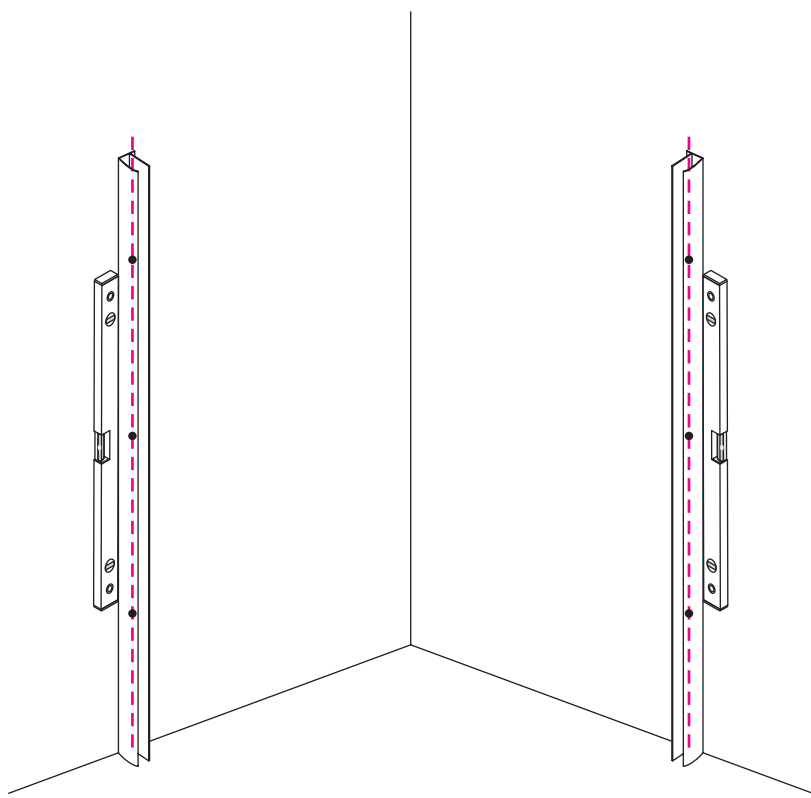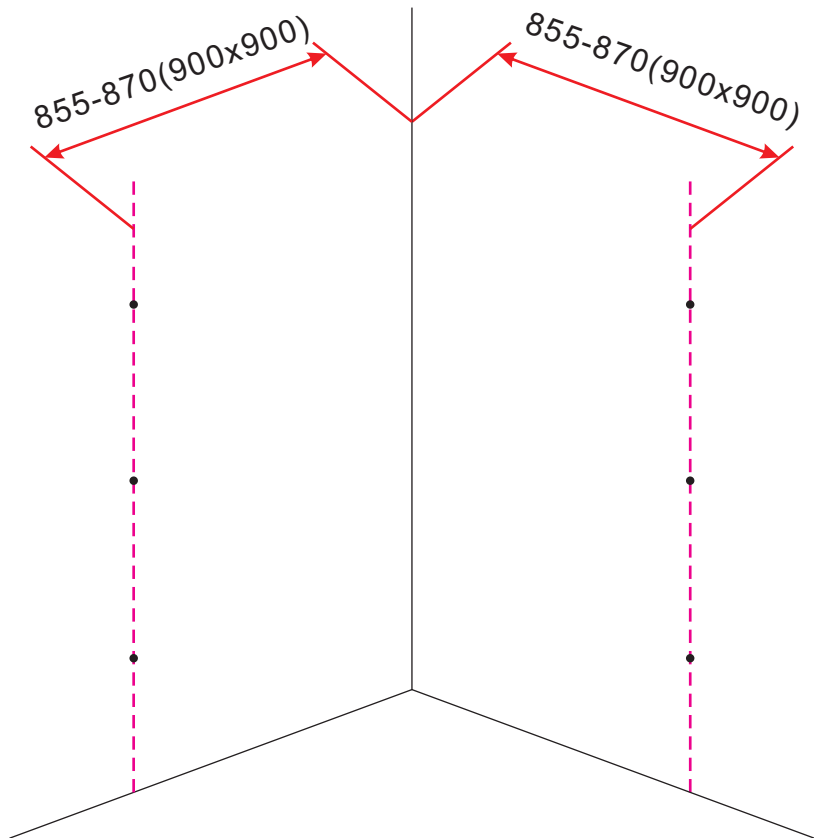

# 5

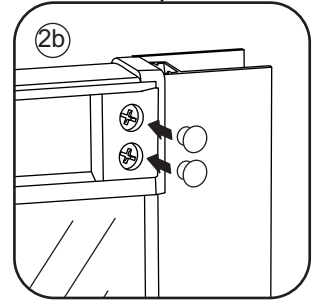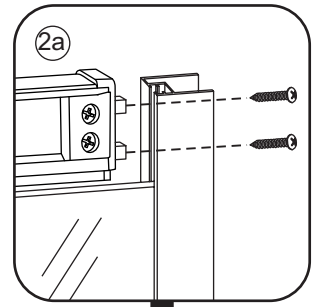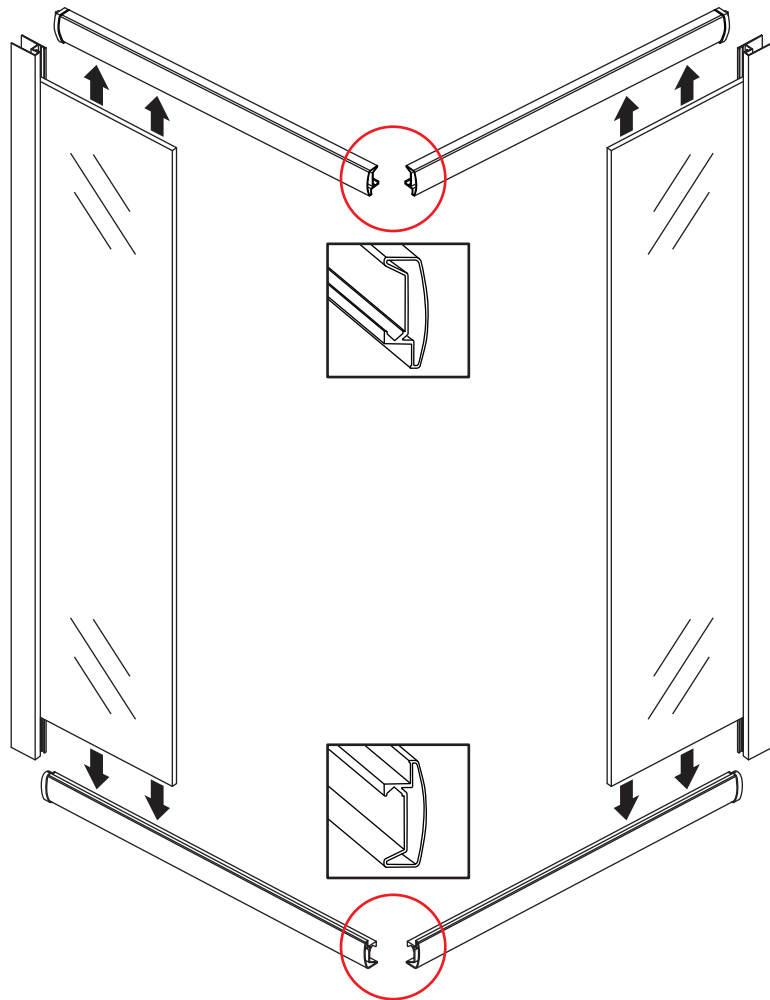






X8  
3x10

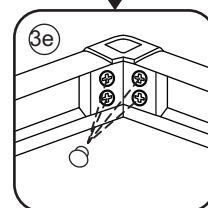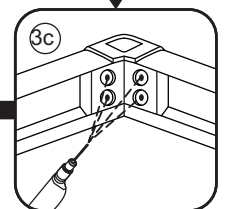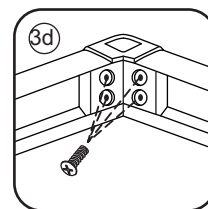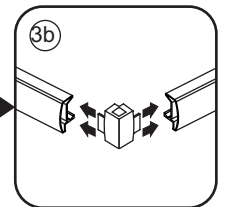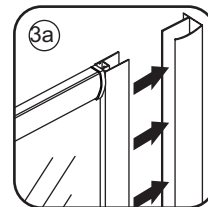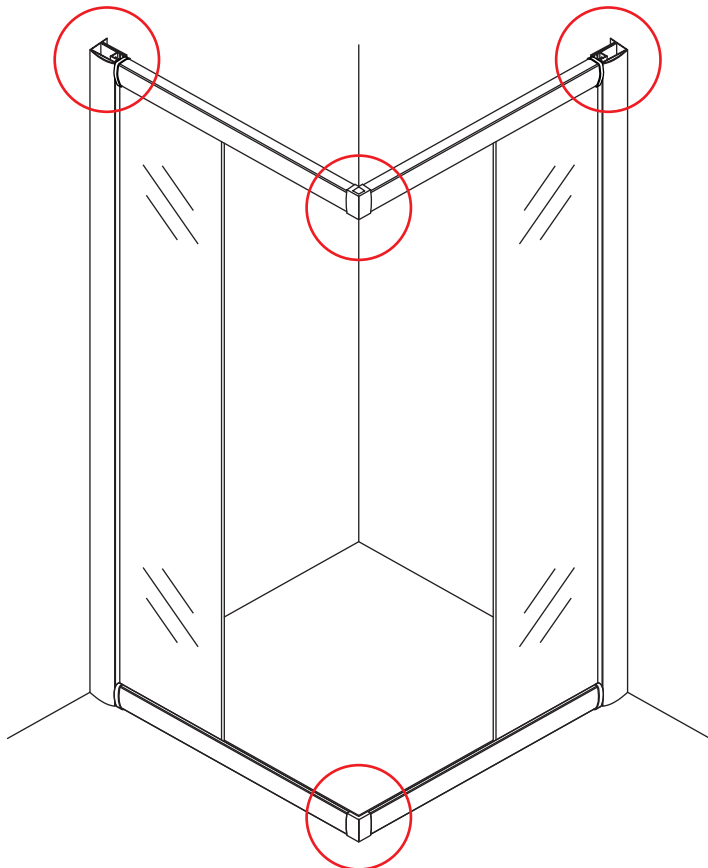


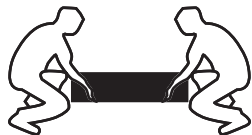
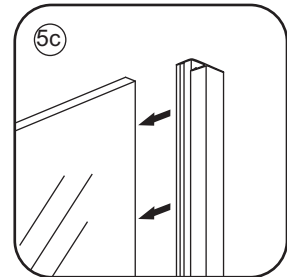
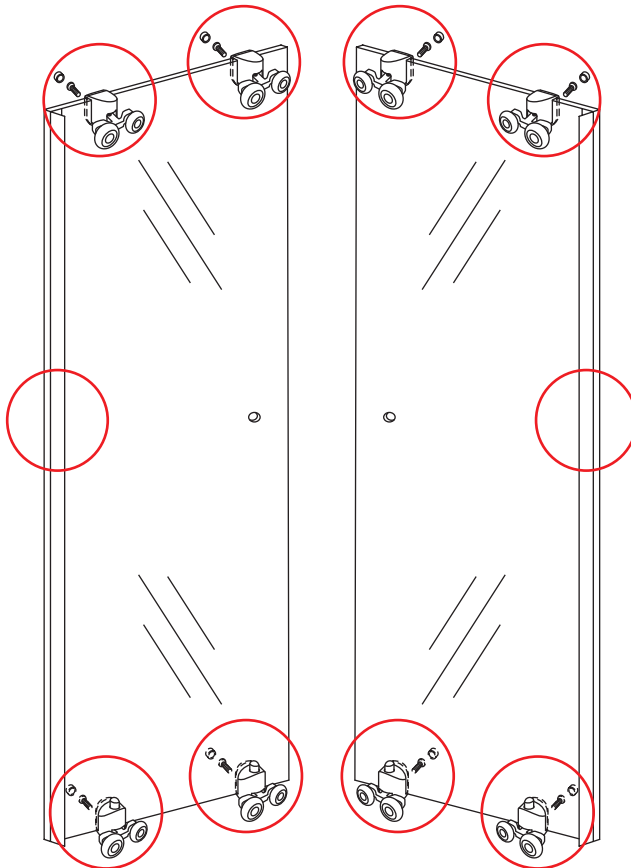
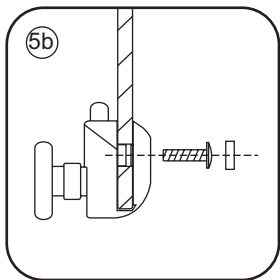
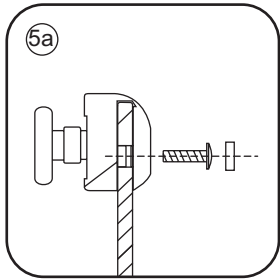
Φ3mm

X8  
4x10







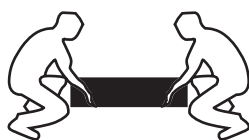


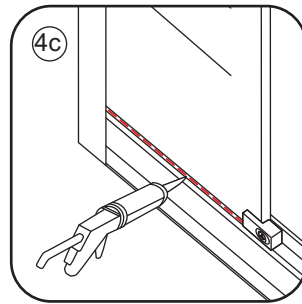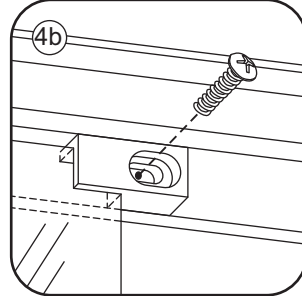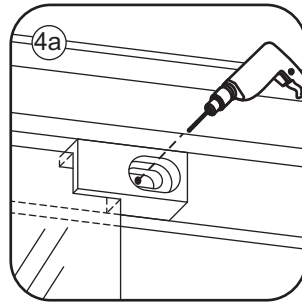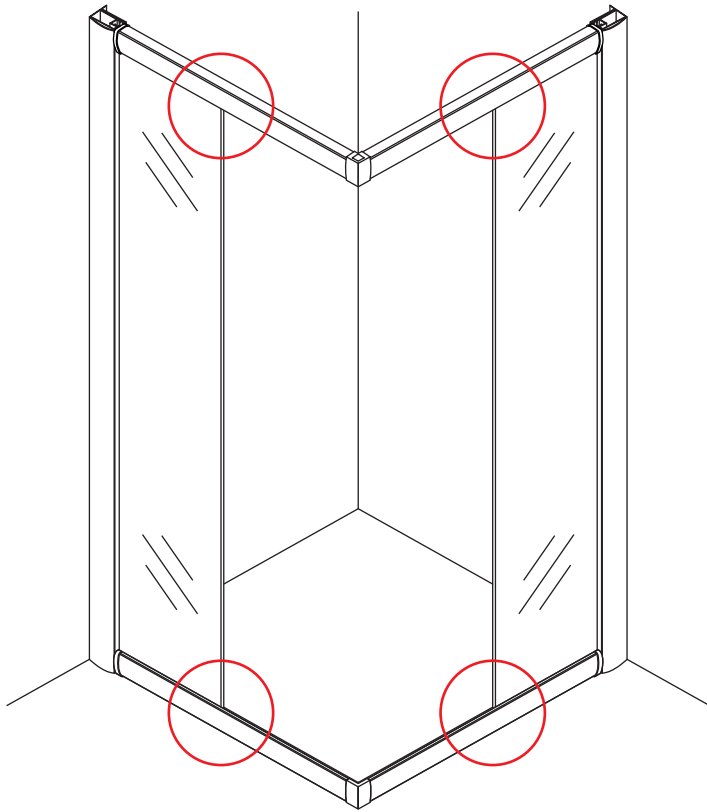






X4  
  
4x8



7

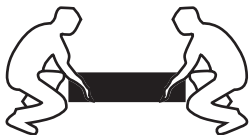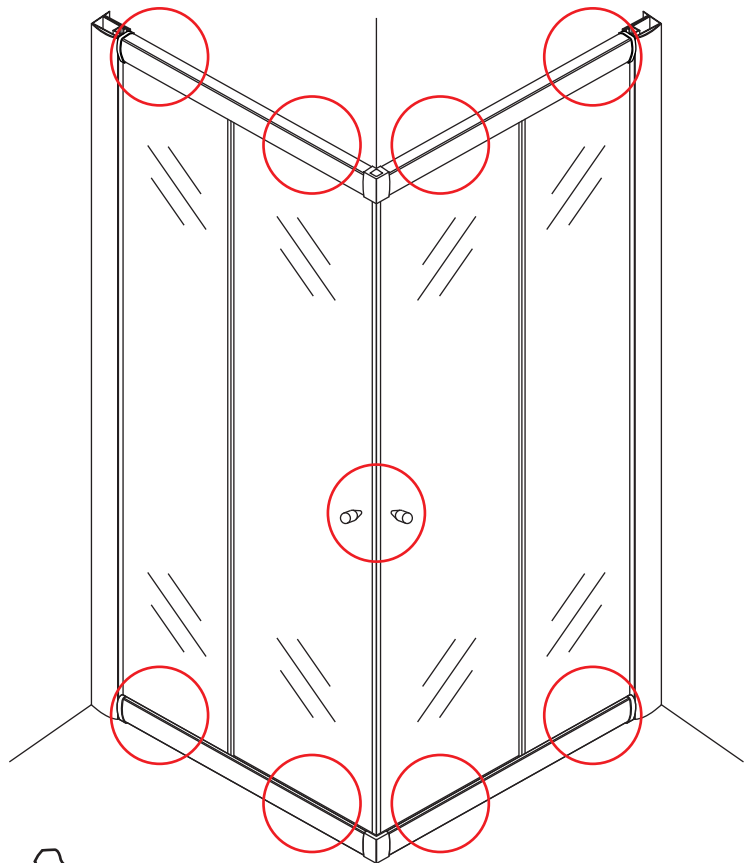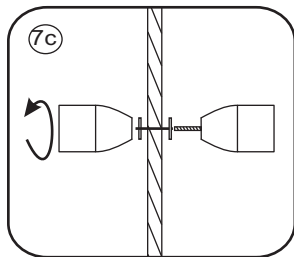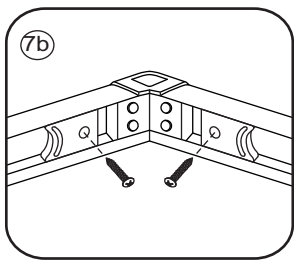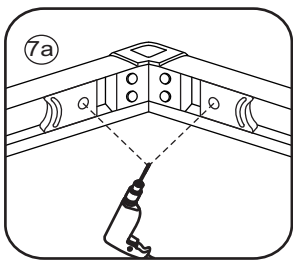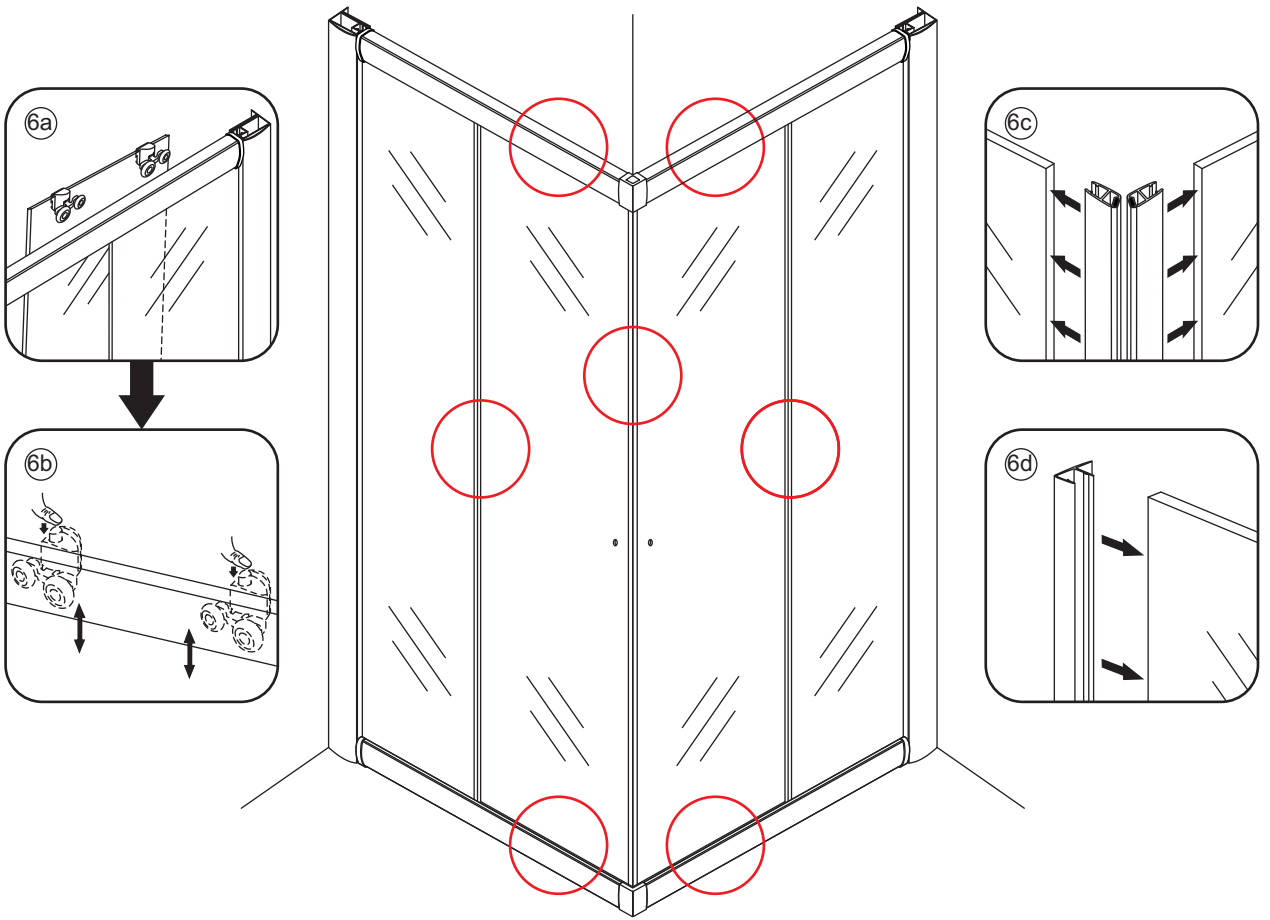



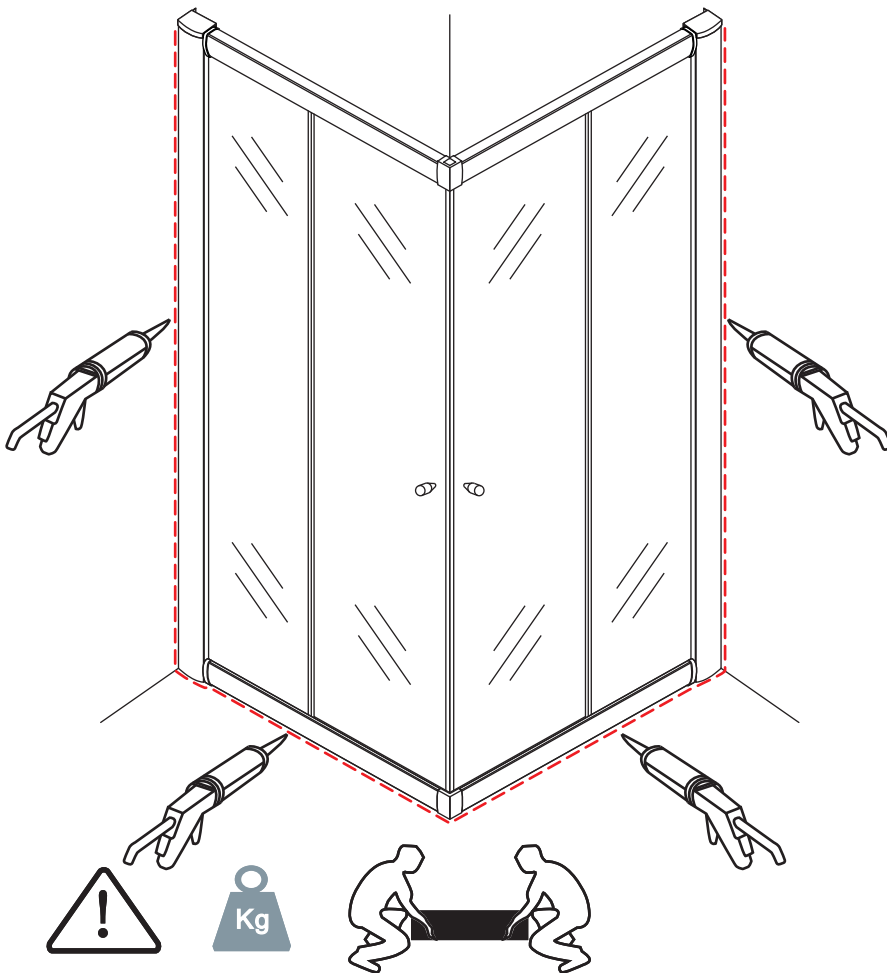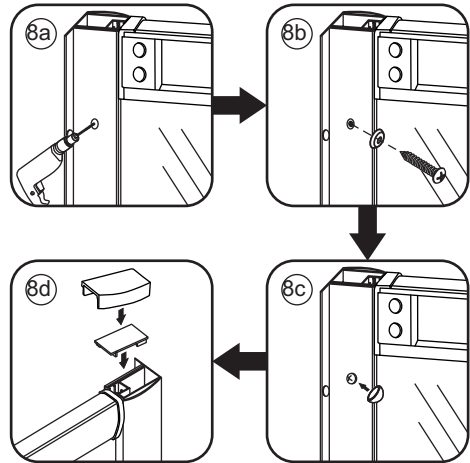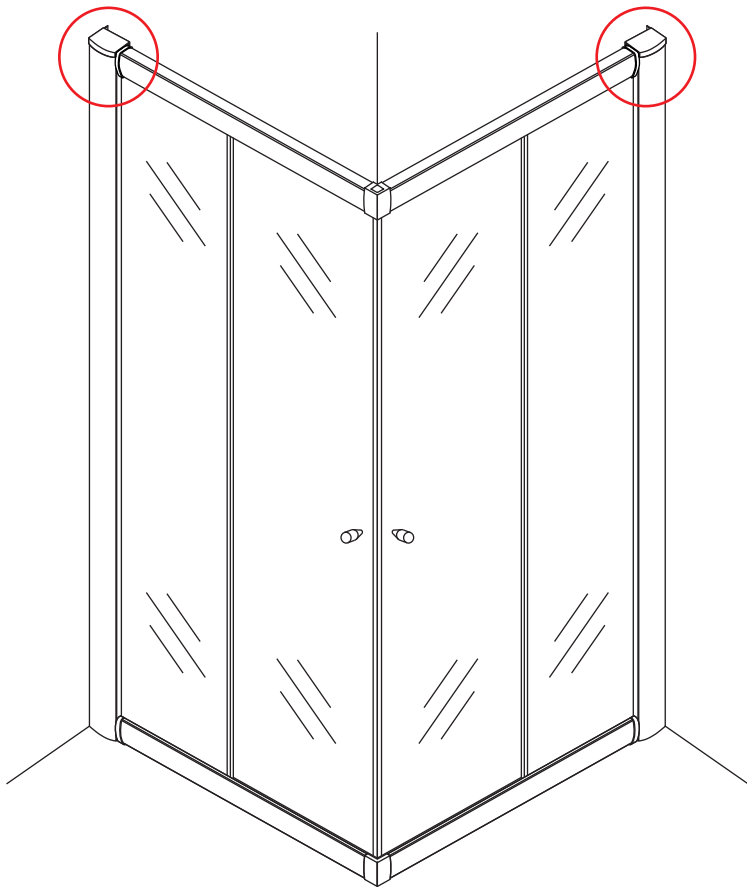

**Voorzie alleen de  
buitenzijde van de  
cabine van siliconenkit.**

