

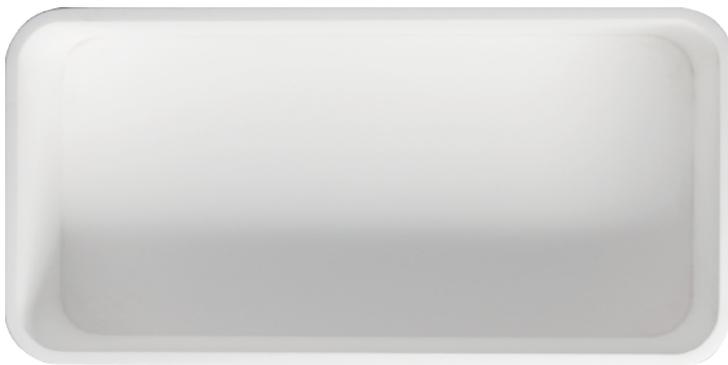








Solidtondo Shelves Installation Manual

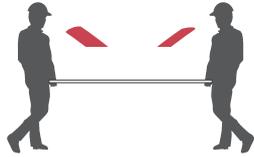


Important:

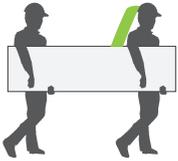


Tools Needed:

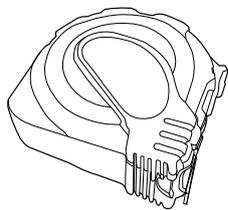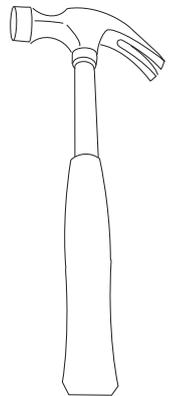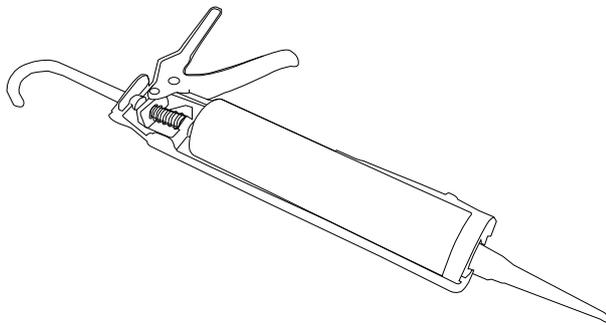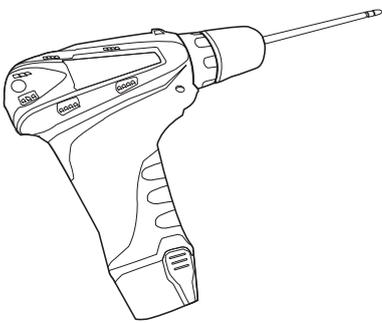

1

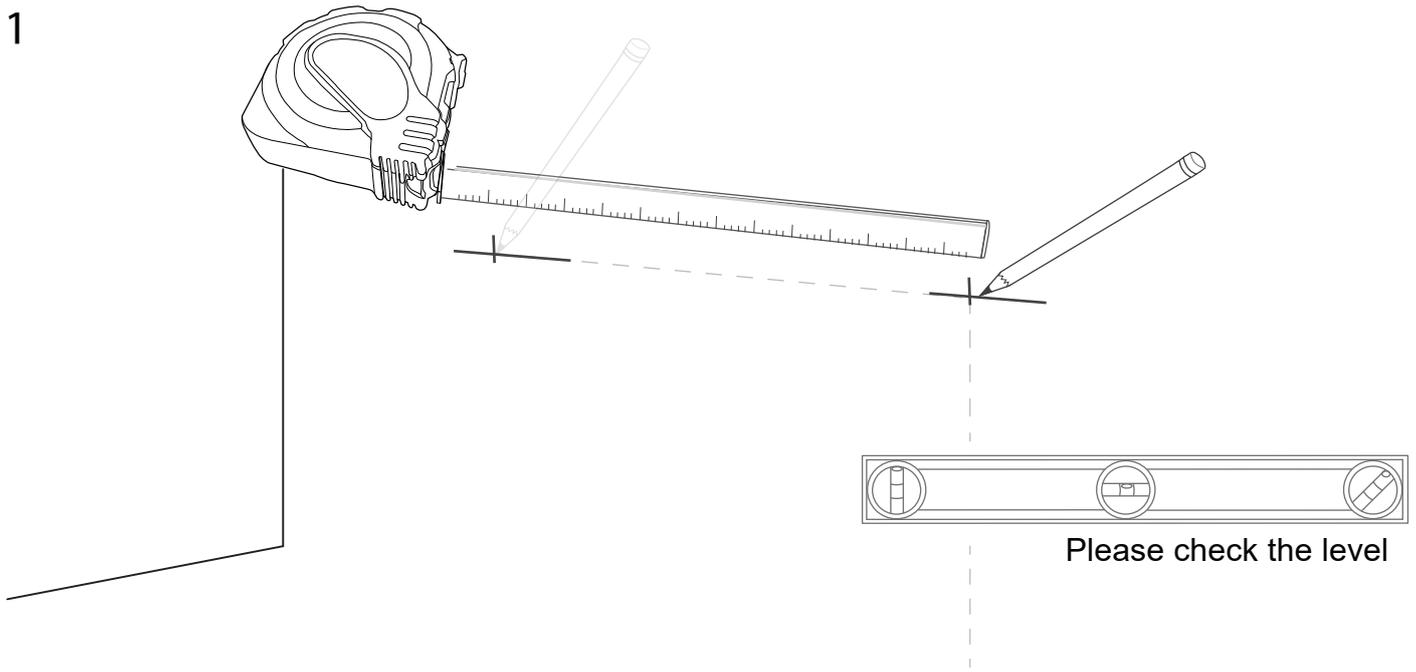

2

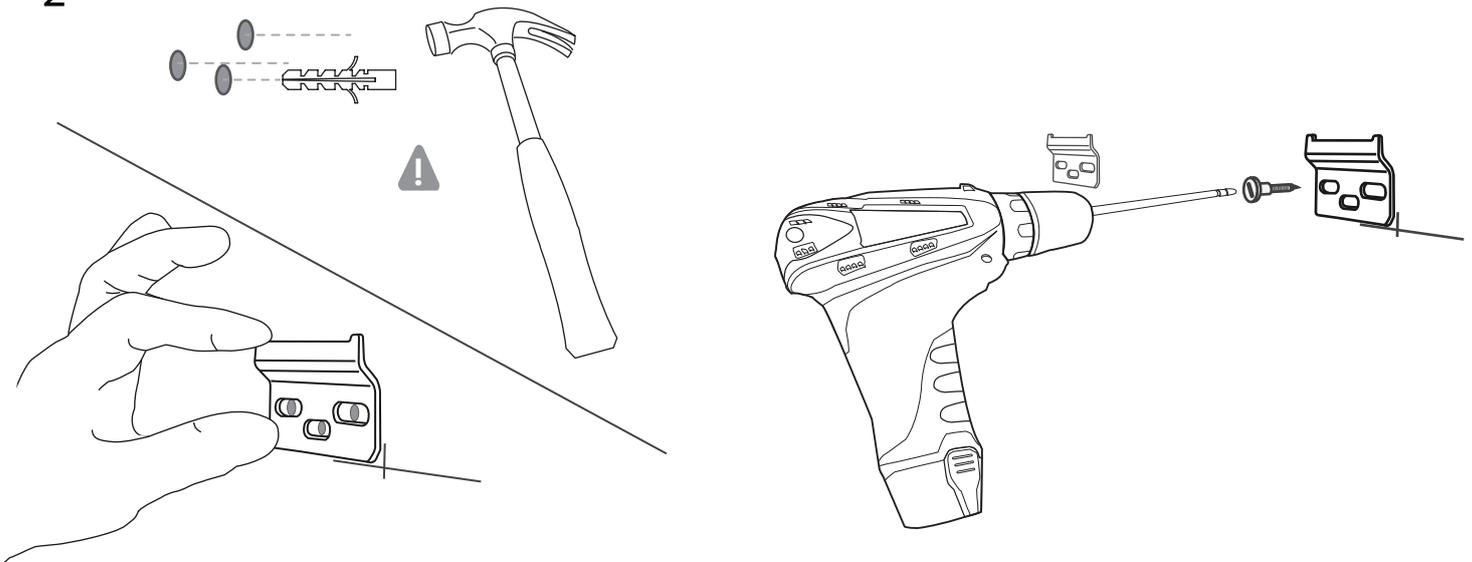


Place the Metal bracket on the mark and fasten with screws

3



Three screws should be fixed for each metal bracket


4

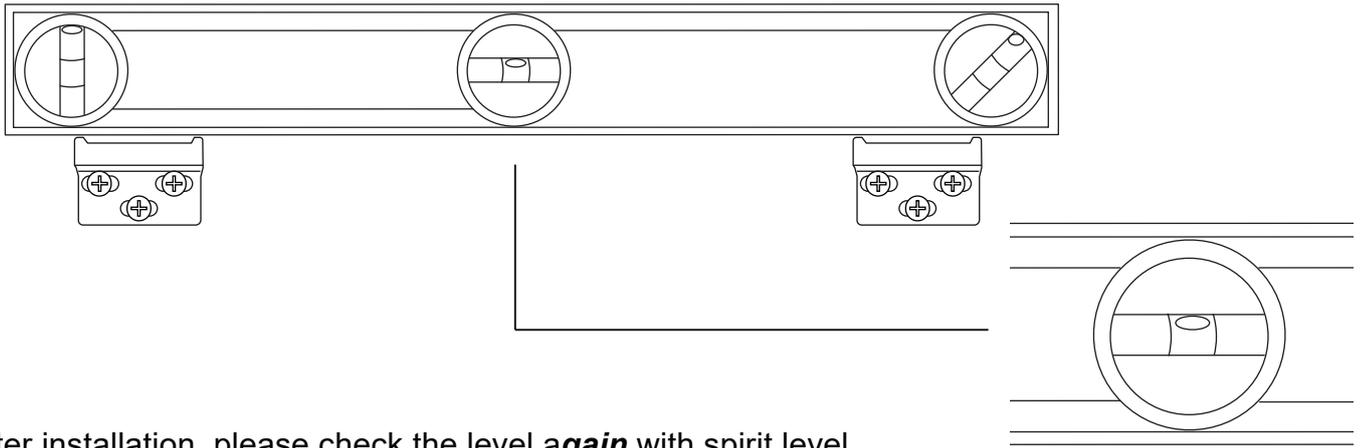

After installation, please check the level **again** with spirit level


Make sure the bubble between the two lines of the spirit level

5

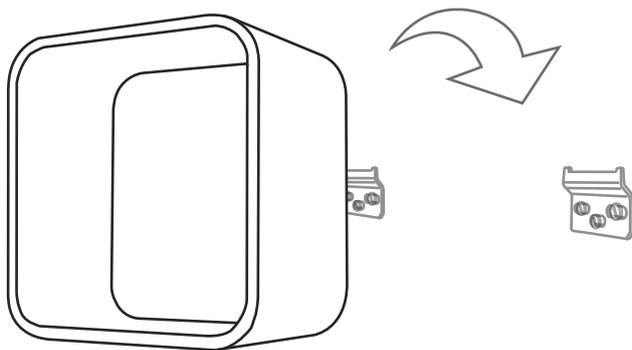

Hang up the Shelves on to the bracket

6

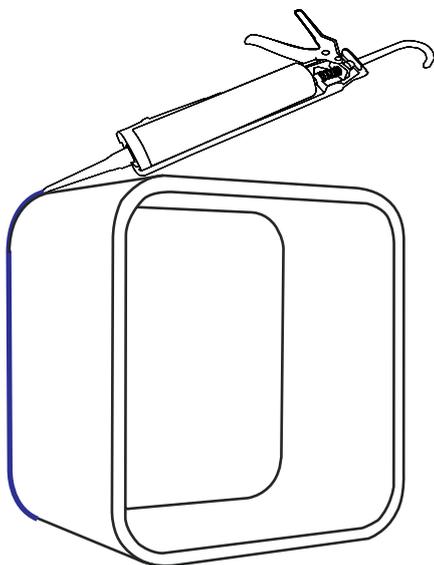

Use silicone to seal around the frame and wait for 24 hours to dry